



Newland AIDC
Scanning Made Simple

Portable Data Collector NLS-MT37H



User Guide

Disclaimer

© 2021 Newland Auto-ID Tech. Co., Ltd. All rights reserved.

Please read through the manual carefully before using the product and operate it according to the manual. It is advised that you should keep this manual for future reference.

Do not disassemble the device or remove the seal label from the device, doing so will void the product warranty provided by Newland Auto-ID Tech. Co., Ltd.

All pictures in this manual are for reference only and actual product may differ. Regarding the product modification and update, Newland Auto-ID Tech. Co., Ltd. reserves the right to make changes to any software or hardware to improve reliability, function, or design at any time without notice. The information contained herein is subject to change without prior notice.

The products depicted in this manual may include software copyrighted by Newland Auto-ID Tech. Co., Ltd or third party. The user, corporation or individual, shall not duplicate, in whole or in part, distribute, modify, decompile, disassemble, decode, reverse engineer, rent, transfer or sublicense such software without prior written consent from the copyright holders.

This manual is copyrighted. No part of this publication may be reproduced, distributed, or used in any form without written permission from Newland.

Risk Warning Regarding Unauthorized System Updates:

You should use the Newland-provided tool to update this product's system. Modifying system files through installing a third-party ROM system or using any cracking method may result in product malfunction or data loss and this will void your warranty.

Newland Auto-ID Tech. Co., Ltd. reserves the right to make final interpretation of the statement above.

Newland Auto-ID Tech. Co., Ltd.

No.1, Rujiang West Rd., Mawei, Fuzhou, Fujian, China 350015

<http://www.newlandaidc.com>

Revision History

Version	Description	Date
V1.0.0	Initial release	2022-02-17
V1.0.1	Add description about charging temperature	2022-10-08
V1.0.2	Add description about the battery maintenance	2022-12-01

Contents

Chapter 1 About This Guide	1
Introduction.....	1
Documentation Set.....	1
Chapter Descriptions	1
More Information	2
Chapter 2 Getting Started	3
Introduction.....	3
Unpacking	3
Getting Started	4
The MT37H.....	4
Charging the Battery	5
LED.....	6
Keypad.....	7
Communicating with PC.....	8
Installing the SIM Card.....	9
Chapter 3 Basics	10
Introduction.....	10
Switching On/Restart/Switching Off the MT37H	10
Locking/Unlocking the MT37H.....	11
Home Screen	12
Status Icons.....	13
Installing App.....	14
Uninstalling App.....	14
Date & Time.....	15
Display.....	16
Ringtones	17
Restoring Factory Settings	18
Language & Input Method	19

Floating Button Settings	20
HID Output Settings	21
Shortcuts to Apps	26
Widgets	26
Chapter 4 Scanning Barcodes	27
Introduction.....	27
Scanning 1D Barcode	27
Scanning 2D Barcode	28
Programming Scanner.....	29
Enable Scan	30
Output Mode.....	31
Scan Mode	32
Scan Trigger	33
Prefix & Suffix.....	34
Good Read Indicator	35
Encoding	36
Data Edit.....	37
Broadcast-output Settings	38
Symbologies.....	39
Temperature Measurement	43
Temperature Scan Demo.....	44
Chapter 5 Bluetooth	46
Chapter 6 Wi-Fi	47
Introduction.....	47
Wi-Fi Settings.....	47
IP Settings	49
Chapter 7 Mobile Network	50
Introduction.....	50
Mobile Network Settings.....	50
APN Settings	51

Chapter 8 Admin Tool	52
Introduction.....	52
Admin Mode Setting	52
Chapter 9 Whitelist Manager	56
Introduction.....	56
Logging in to Whitelist Manager	56
Chapter 10 Others	57
Camera.....	57
GPS.....	58
NFC (optional).....	59
Memory Cleanup	60
Chapter 11 System Update	61
Introduction.....	61
Online Update	61
Locate Update	61
Chapter 12 App Development Guide	65
Development Environment	65
Use of Non-standard Interfaces.....	65
Chapter 13 Maintenance & Troubleshooting	66
Introduction.....	66
Important Safety & Handling Information.....	66
Disassembly and Retrofit	66
External Power Supply.....	66
Abnormal Situation.....	66
Drop Damage.....	66
LCD Screen	66
Stacking Heavy Objects	66
Mounting Location.....	66

Wireless Functionalities	67
Use & Maintenance.....	67
Battery Safety Guidelines.....	67
Troubleshooting.....	69

Chapter 1 About This Guide

Introduction

This guide provides instructions for programming and operating the NLS-MT37H portable data collector (hereinafter referred to as “the MT37H” or “the terminal”).

Documentation Set

The documentation set for the MT37H includes:

- ✧ **NLS-MT37H Portable Data Collector Quick Start:** Describes how to get the NLS-MT37H up and running.
- ✧ **NLS-MT37H Portable Data Collector User Guide:** Describes how to program and use the NLS-MT37H.

Chapter Descriptions

- ✧ *Chapter 1 About This Guide* Provides general description of this manual.
- ✧ *Chapter 2 Getting Started* Provides information on getting the MT37 up and running for the first time.
- ✧ *Chapter 3 Basics* Describes how to program the MT37 for the use of its basic features.
- ✧ *Chapter 4 Scanning Barcodes* Provides the instructions as to how to scan 1D/2D barcodes and how to program the scanner.
- ✧ *Chapter 5 Bluetooth* Explains how to use Bluetooth functionality.
- ✧ *Chapter 6 Wi-Fi* Explains how to use Wi-Fi functionality.
- ✧ *Chapter 7 Mobile Network* Explains how to use Mobile Network functionality.
- ✧ *Chapter 8 Admin Tool* Explains how to use the admin tool.
- ✧ *Chapter 9 Whitelist Manager* Explains how to use the whitelist management tool.
- ✧ *Chapter 10 Others* Explains how to use GPS and NFC functionalities.
- ✧ *Chapter 11 System Update* Explains how to update the system.
- ✧ *Chapter 12 App Development Guide* Describes the app development environment and the use of

non-standard interfaces.

✧ *Chapter 13 Maintenance & Troubleshooting*

Provides troubleshooting solutions for issues that might occur when using the MT37H.

More Information

For more product and support information, please visit our website: <http://www.newlandaidc.com>.

Chapter 2 Getting Started

Introduction

This chapter lists the parts for the MT37H and explains how to install, charge the battery, and power on the MT37H for the first time.


Unpacking

Carefully remove all protective material from the pack and verify that the followings were received:

- ✧ 1 x NLS-MT37H main unit
- ✧ 1 x USB cable
- ✧ 1 x Wrist lanyard
- ✧ 1 x Quick start manual
- ✧ 1 x Warranty card
- ✧ 1 x AC adapter

Getting Started

The MT37H

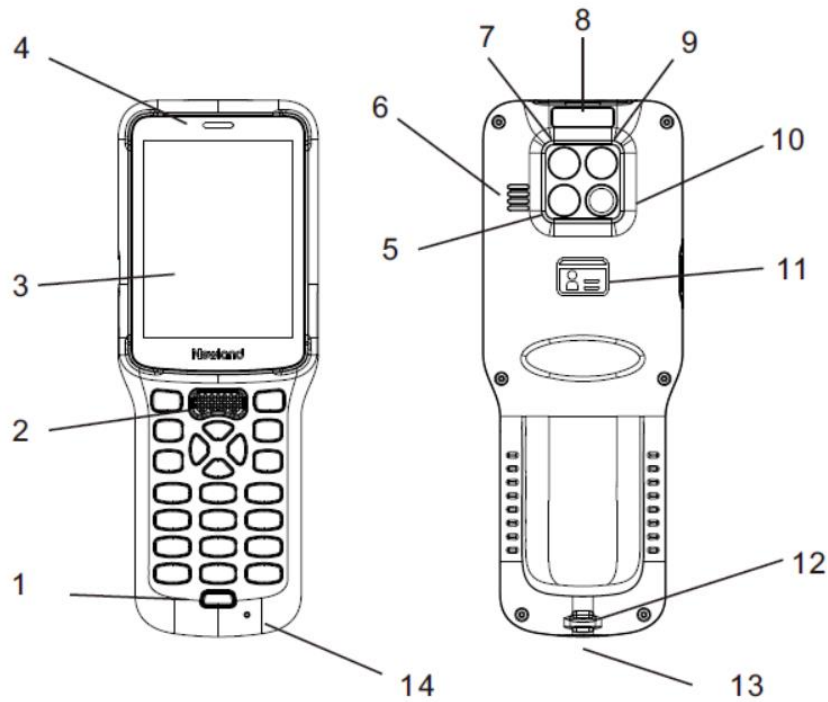


1	Power Key	2	Scan Key
3	Screen	4	LED
5	Range Sensor (Optional)	6	Speaker
7	Temperature Sensor	8	Scan Engine (Optional)
9	Flashlight	10	Camera
11	NFC	12	Rope Hole
13	USB Connector	14	MIC

Charging the Battery

There are two methods to charge the battery.

✧ **Charge with AC adapter:** It takes less than 3 hours to fully charge it (The terminal is shut down or in sleep mode).

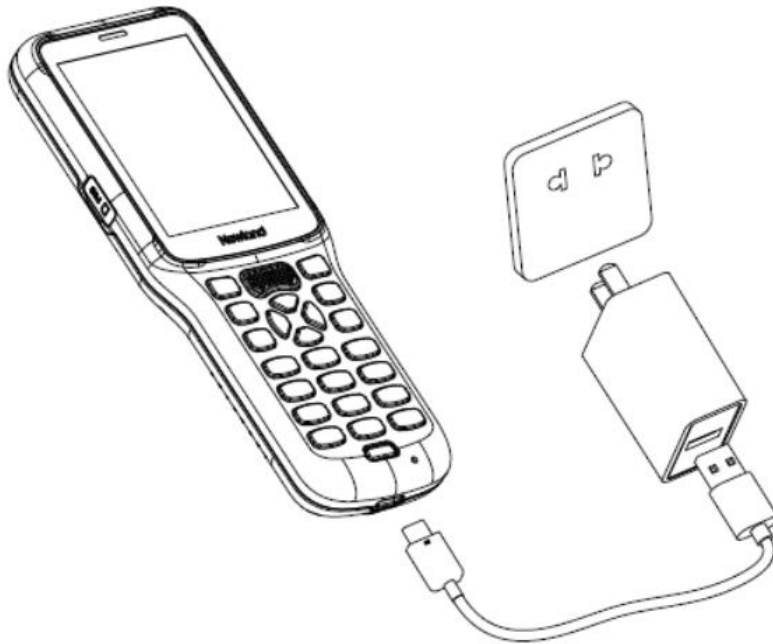


- 1) Low battery may result in malfunction of the terminal. Before using MT37H for the first time, charge the battery for at least 8 hours.
- 2) Connect the USB connector to a power outlet using the included AC adapter & Cable. (Do not plug or pull the USB connector violently to avoid damage)
 - The AC adapter is recommended to use 5V/2A.

✧ **Charge with a PC**

Note: Because the current of USB Connector on PC is usually only 5V/500mAh. It will take a long time to fully charge with a computer.

LED

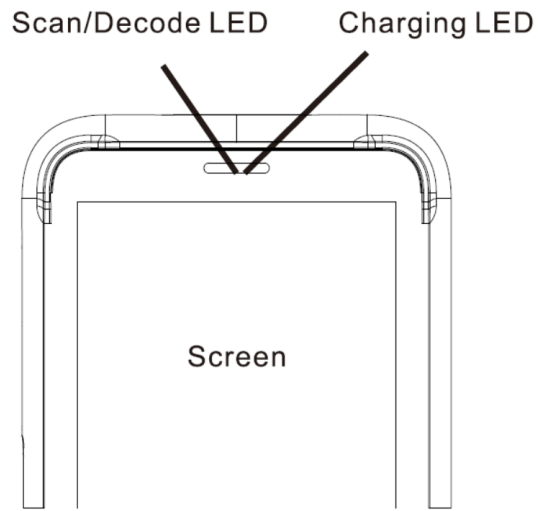


Scan/Decode LED	
Blue LED flashes once	Decode successfully
Charging LED	
Blue LED on	Fully charged
Red LED on	Charging in progress
Red LED flashes	Low-battery alert

Note:

1. If the MT37H battery is completely drained, please press the power key to turn it on after 15 minutes of being charged.
2. When charging, make sure that the indoor temperature is above 0 degrees Celsius (32 degrees Fahrenheit). The device will stop charging at a low temperature for safety consideration.

Keypad

The MT37H has 24 keys including function, alphanumeric, navigation, and scan keys.

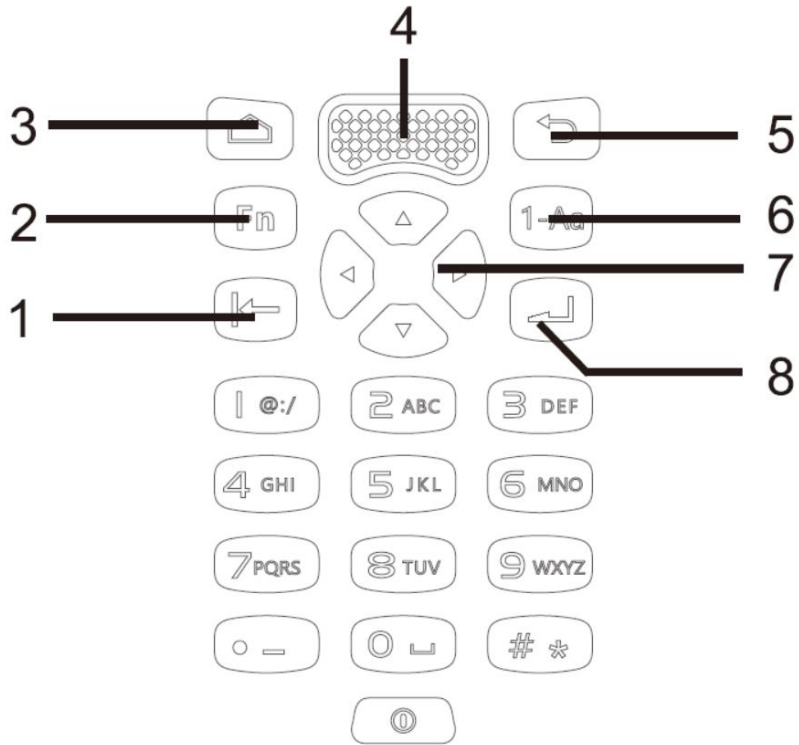

1	Backspace Key	2	Fn Key
3	Home Key	4	Scan Key
5	Return Key	6	Alphanumeric Key
7	Navigation Key	8	Enter Key

- When Fn Key is pressed, the number key 0-9 will be activated as user-defined keys F1-F10.
- Fn+0 refer to F10


Communicating with PC

Step 1: Connect the USB Type-C port on the MT37H to your computer with the included USB cable.

Step 2: Switch the MT37H on. On the Home screen, swipe from top to bottom with one finger in one smooth motion to open the notification bar as shown below.

Step 3: Tap "USB charging this device".

Step 4: Select "Transfer files". Navigate to the "My Computer" section of your computer and look for the newly added drive. Double-click it and you will be connected to the MT37H. Then you may handle the files on the terminal through your computer.

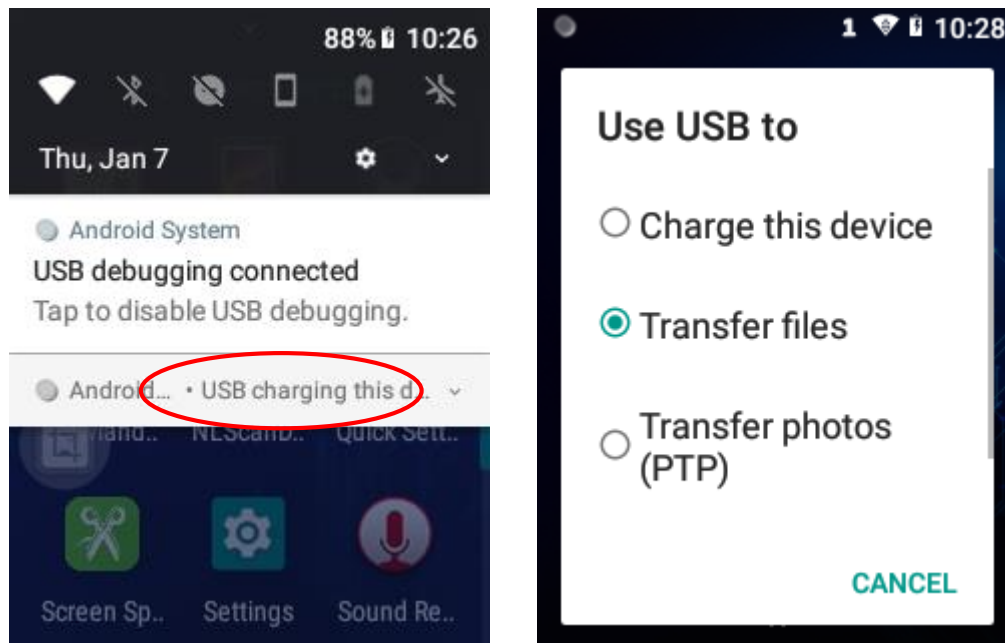

Installing the SIM Card

It should be installed when the device is in power-off mode. Otherwise, the SIM card will be damaged.



Step 1: Pull the SIM Card tray out from the slot and put the SIM card on it.

Step 3: Then gently push the tray into the slot until it locks in place.

Remark: The SIM card slot is with fool-proof design, please do not insert or pull violently to avoid damage.

Chapter 3 Basics

Introduction

This chapter provides the basics of setting and using the MT37H.


Switching On/Restart/Switching Off the MT37H

After installing the SIM card and battery and having the MT37H fully charged, you may switch the terminal on.


Switch the MT37H on: Hold down the Power key on the bottom of the terminal. Note that the initialization is going to take some time before the MT37H displays the Home screen.


Restart the MT37H: Hold down the Power key on the bottom of the terminal until the window below pops up, then tap “restart”.


Switch the MT37H off: Hold down the Power key on the bottom of the terminal until the window below pops up, then tap “Power off”.

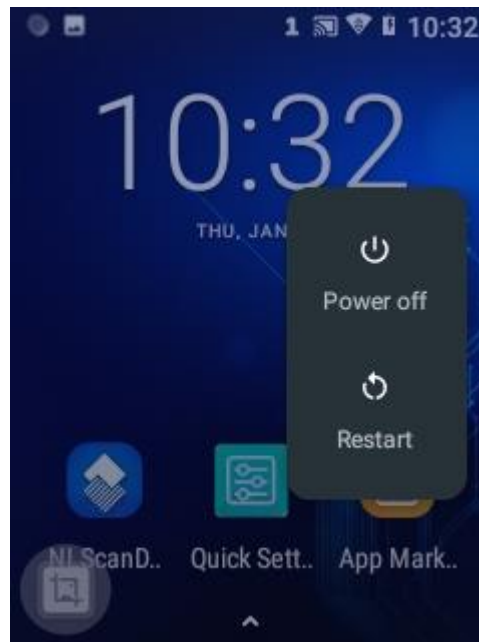


Locking/Unlocking the MT37H


Lock the MT37H: Briefly press the Power key  . If no operation is performed on the MT37H for a preset period of time, the MT37H locks automatically. You can change how long it takes for the MT37H to lock.

Unlock the MT37H: Briefly press the Power key  , then swipe up from the bottom of screen to unlock the MT37H.

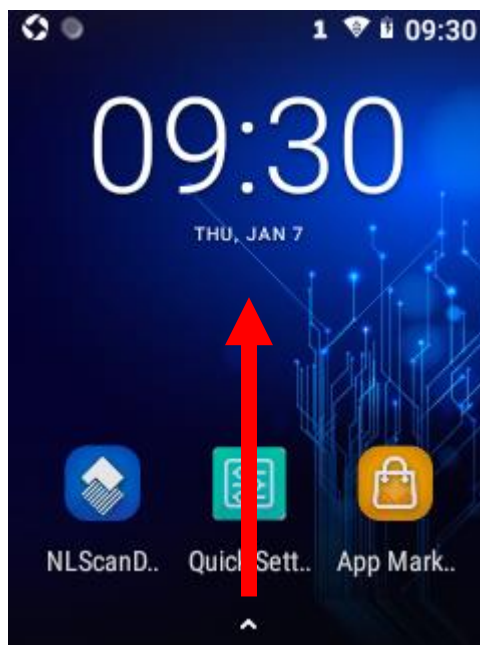


Home Screen

- ✧ **Go to the Home screen:** Press the Home key
- ✧ **View another Home screen:** Swipe left or right.
- ✧ **Open an app:** Tap it.
- ✧ **View all apps/Open apps list:** Tap 

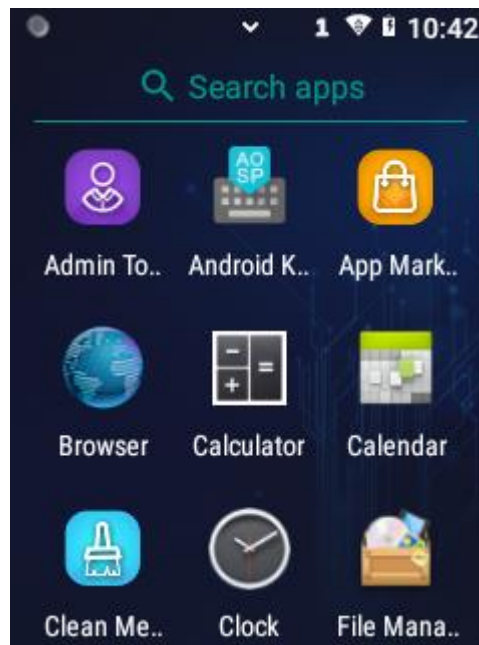













Apps List

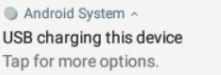- ✧ **Add an app icon to the Home screen:** Tap  on the Home screen. Tap and hold your desired app until it appears on the Home screen and then drags it into a blank area.
- ✧ **Delete an app icon on the Home screen:** Tap and hold your desired app on the Home screen until "X Remove" appears, then drag the app into it. Note that this operation only removes the icon from the Home screen. To remove the app from the MT37H, see the **Uninstalling App** section.

Status Icons

The icons in the status bar at the top of the screen give information about the MT37H.

Status Icon	Description	Status Icon	Description
	WLAN		Signal strength
	Bluetooth		Airplane mode
	USB connected		USB debugging
	Missed calls		Battery charging in progress
	Don't disturb mode		Battery fully charged
	Power saving mode		Vibrate mode


Installing App


Use one of the following methods to install a new app on the MT37H:

1. Download an APK file from an online app store and install it.
2. Connect the MT37H to the PC with the supplied USB cable. Install a new app using the mobile assistant (such as Baidu Mobile Assistant) installed on the PC.

Uninstalling App

Follow the procedure below to remove an app from the MT37H:




Tap  on the Home screen to view all apps. Tap and hold your desired app until "App info" appears, then tap "App info" and uninstall it

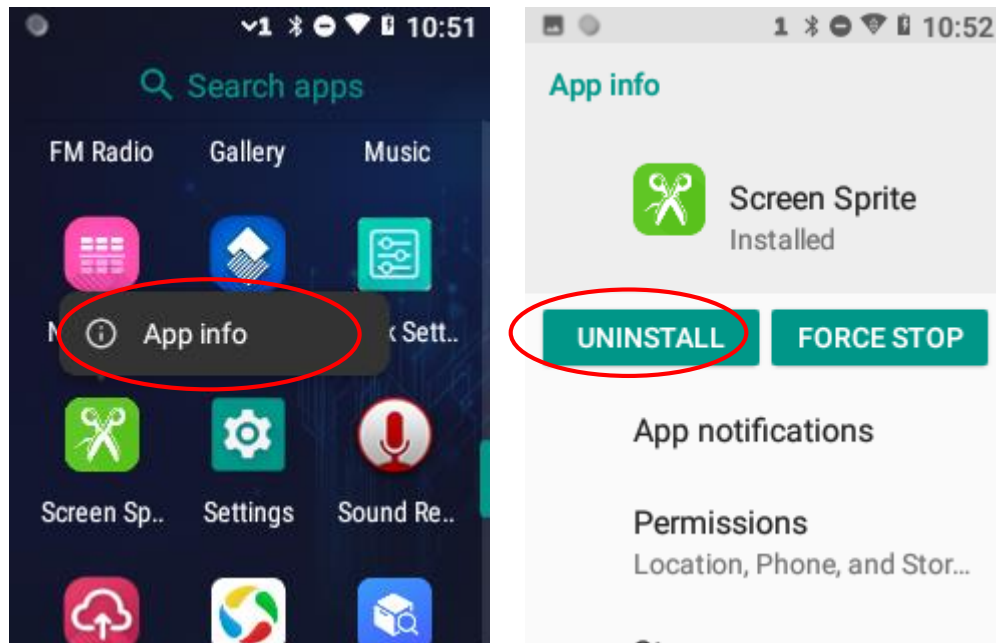


Date & Time






Set the date and time: Tap the app icon and then “System” -> “Date & time”, and set the date and time on the screen shown below as per your needs.

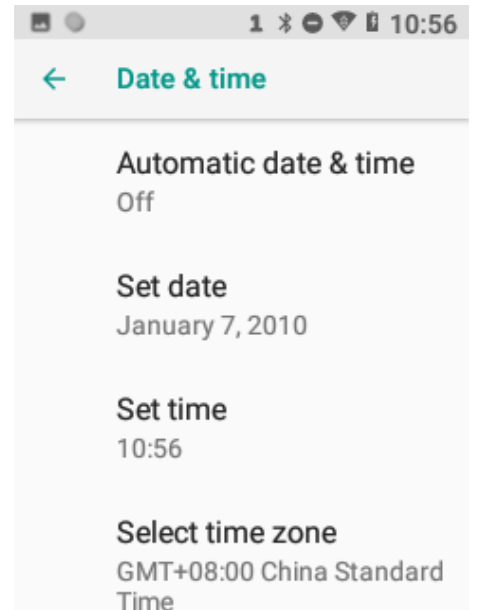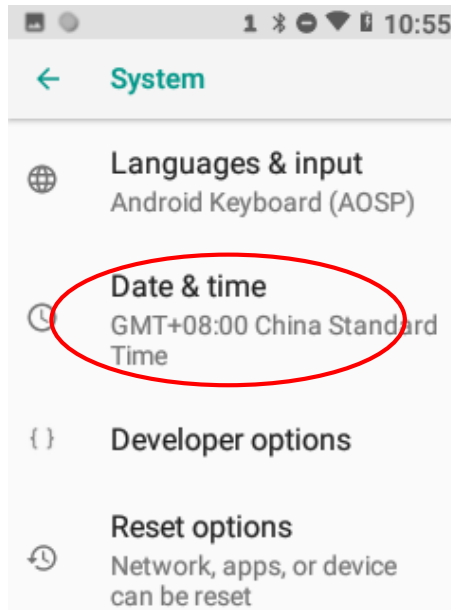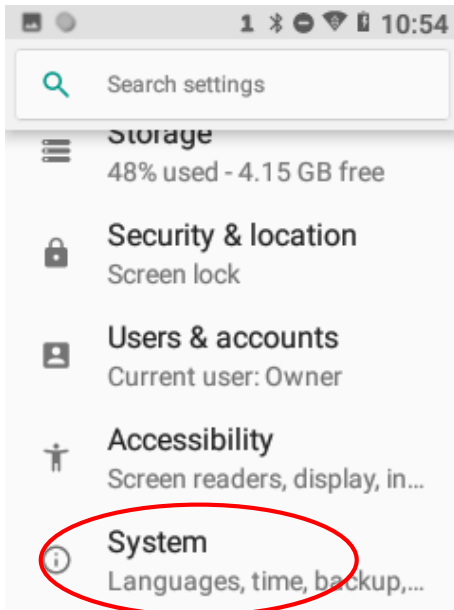


Display

 

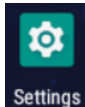
Tap the app icon  and then "Display". Then set the Brightness Level, Night Light, Wallpaper, Sleep, Font Size, and other items on the screen as per your needs.

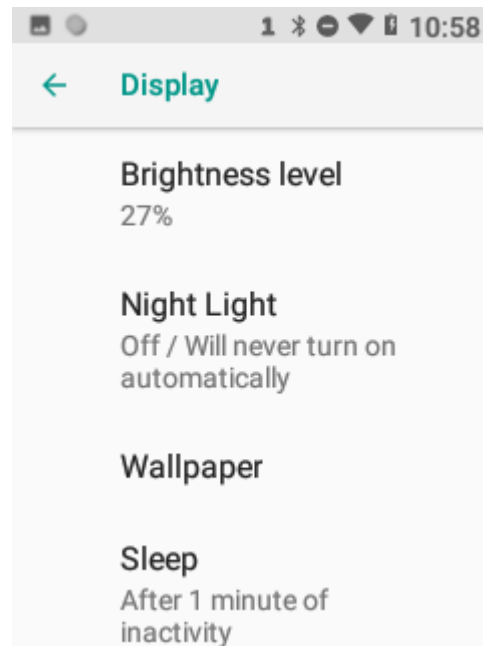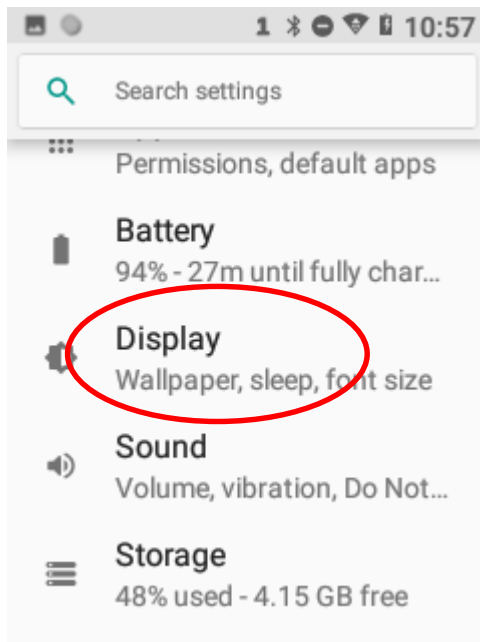


Ringtones

 






Tap the app icon -> "Sound". Then set the ringtones and other notification sounds as per your needs.

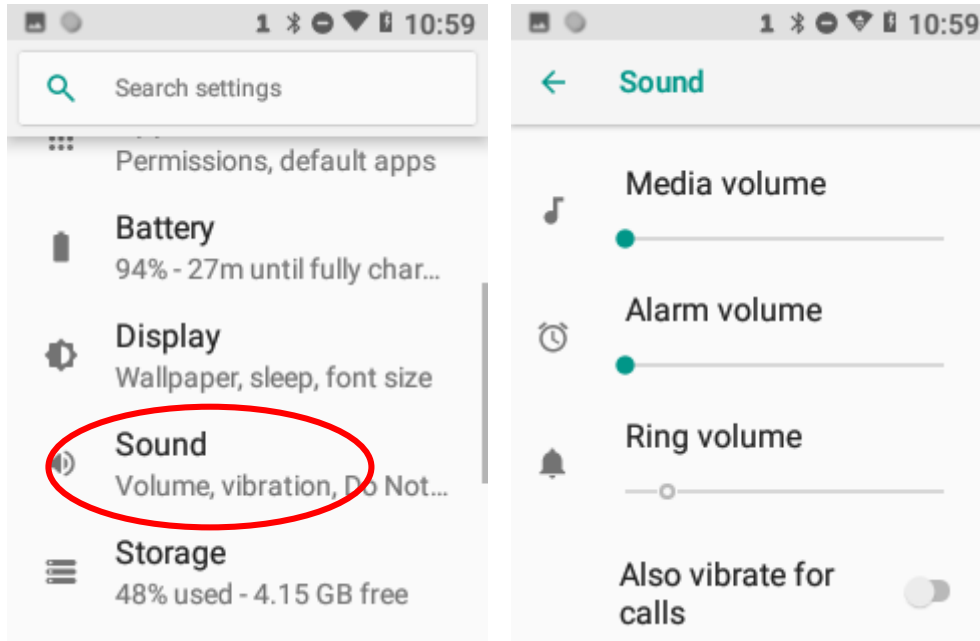


Restoring Factory Settings

 


Tap the app icon -> "System" -> "Reset options" -> "Erase all data (factory reset)" -> "RESET PHONE" -> "ERASE EVERYTHING"

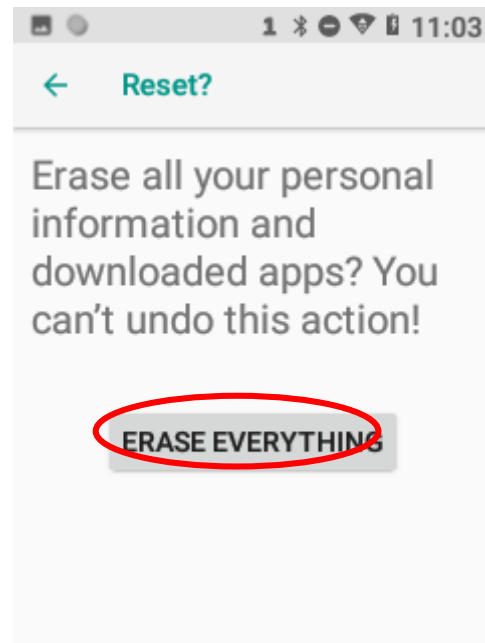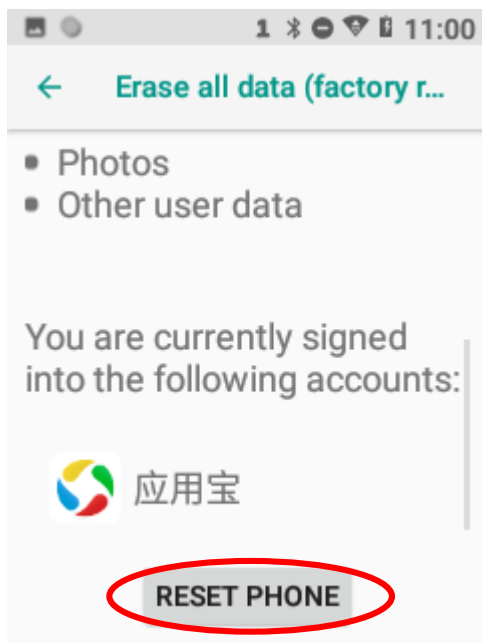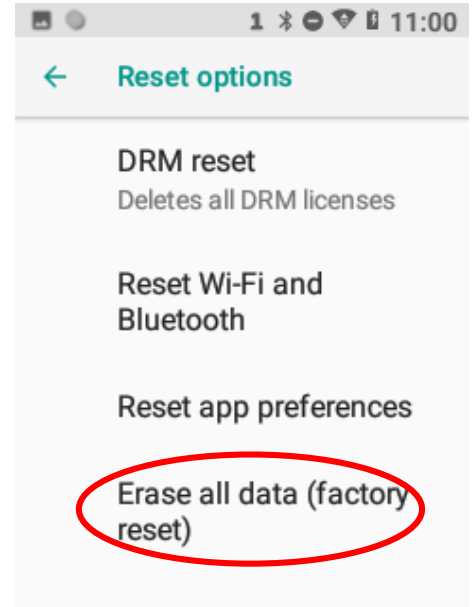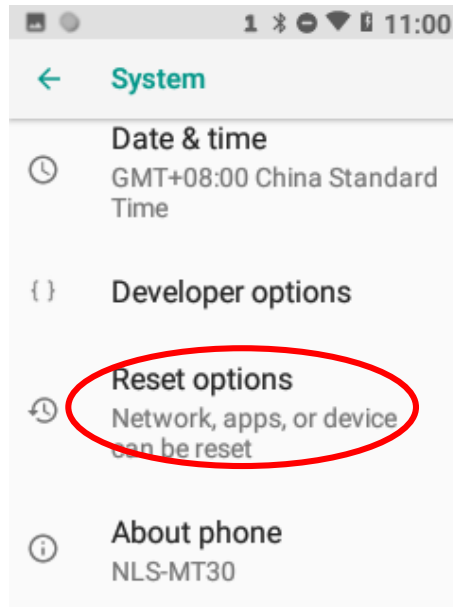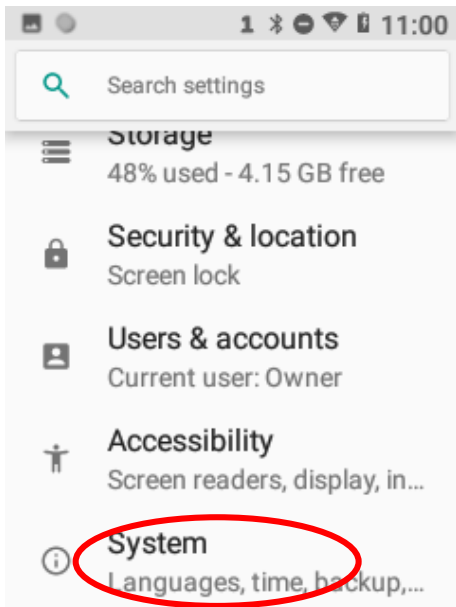

Language & Input Method

 

Tap the app icon -> "Languages & input". Then set the language and input method as per your needs.


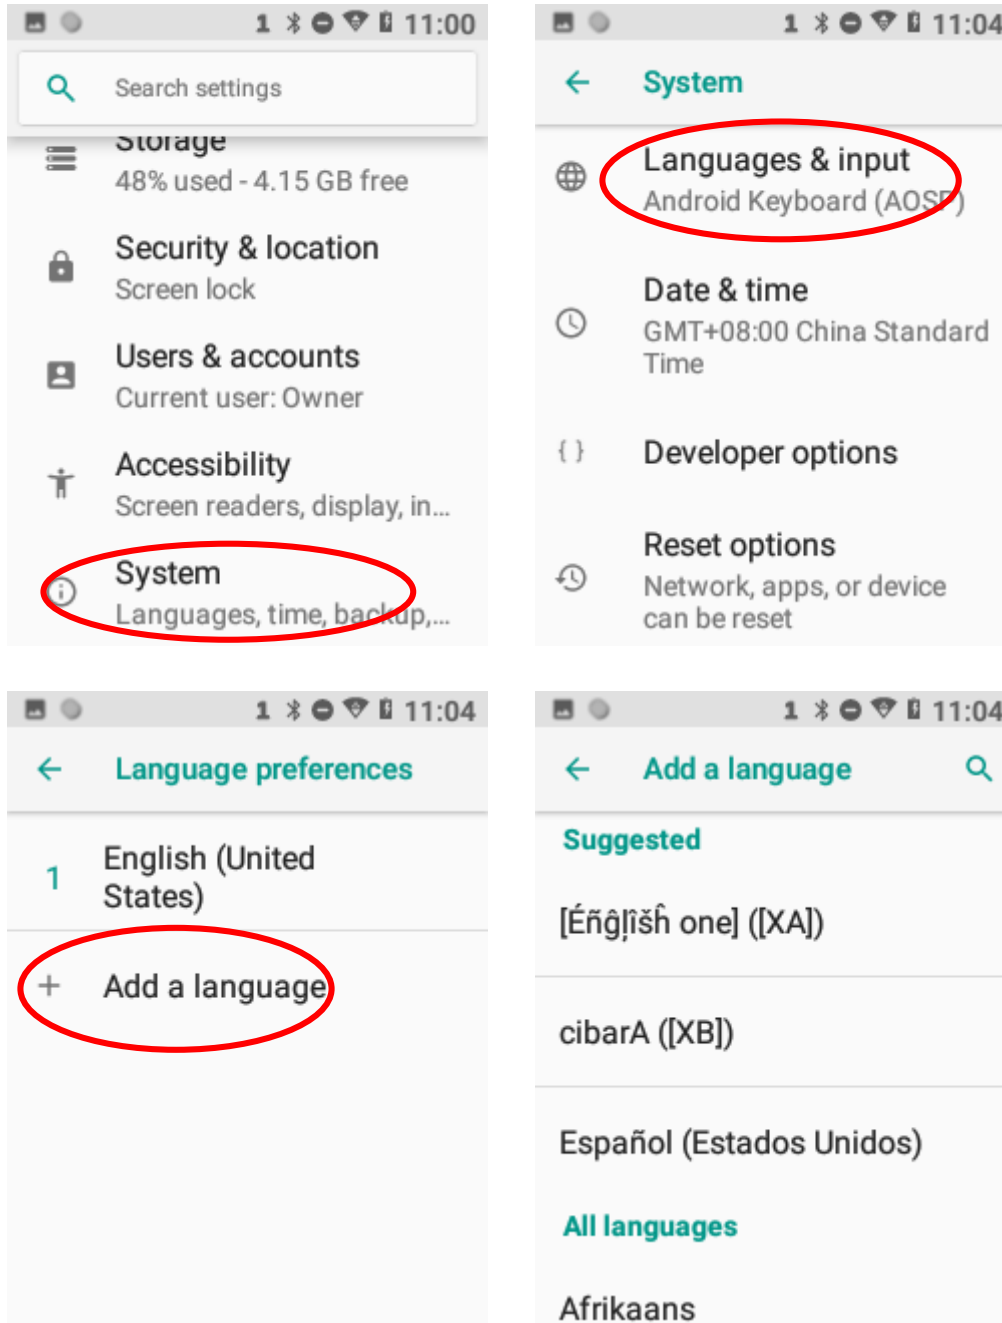


Floating Button Settings

Tapping the floating button can perform tasks such as scanning barcode (**Scan**), taking a screenshot (**Screen snapshot**), turning off screen (**Screen off**), going to the Home screen (**Home**), switching between level and continue scan mode (**Toggle level and continue scan mode**), or showing device name (**Show device name**).

Holding down the floating button  can make it movable.

Show/Hide the floating button: Tap the quick setting app icon  -> "Floating Touch"-> select/unselect "Show float box".

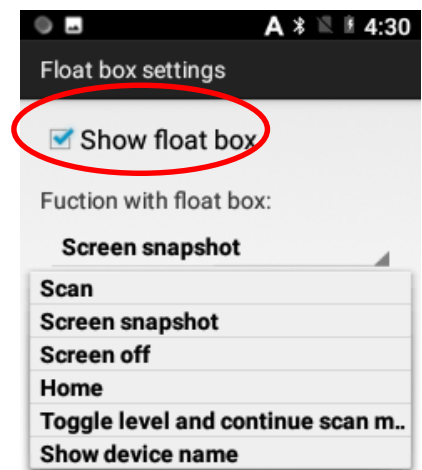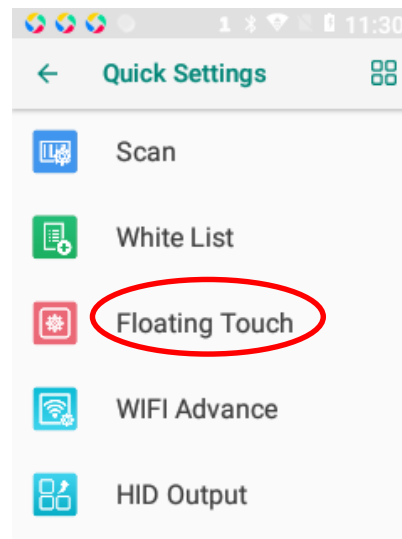


HID Output Settings


The HID output setting function allows users to simulate the MT37H as a wired or wireless scanner. There are two connection methods for this function.


****USB HID Output****

 1. Use the MT37H device to scan the below QR code, then the output mode of the MT37H will switch to “Output via API”.




2. Tap the quick setting icon  Quick Sett... -> “HID Output” -> “USB Output Settings” -> Turn on “Set to hid when charging”.

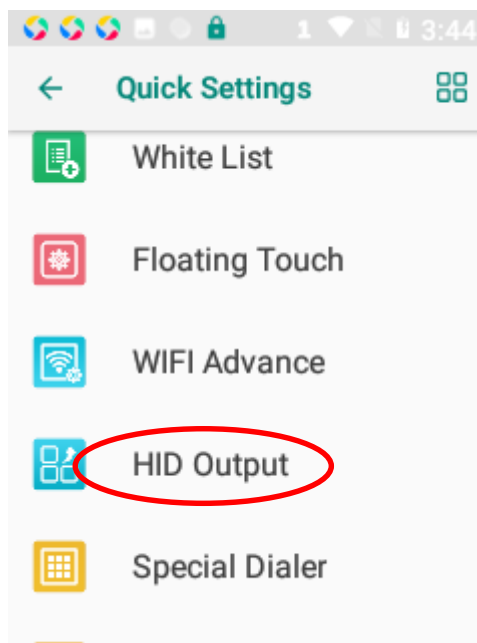

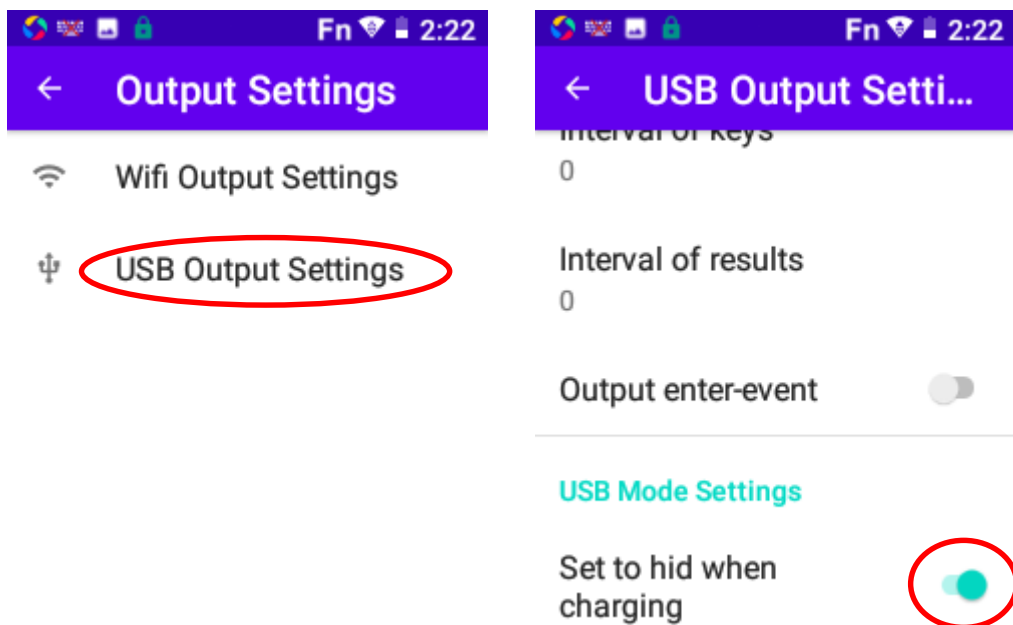

3. Connect the USB Type-C port on the MT37H to your computer with the included USB cable. Then set the USB connection mode to "Charge this device". Then the MT37H will output the scanned data to the PC.

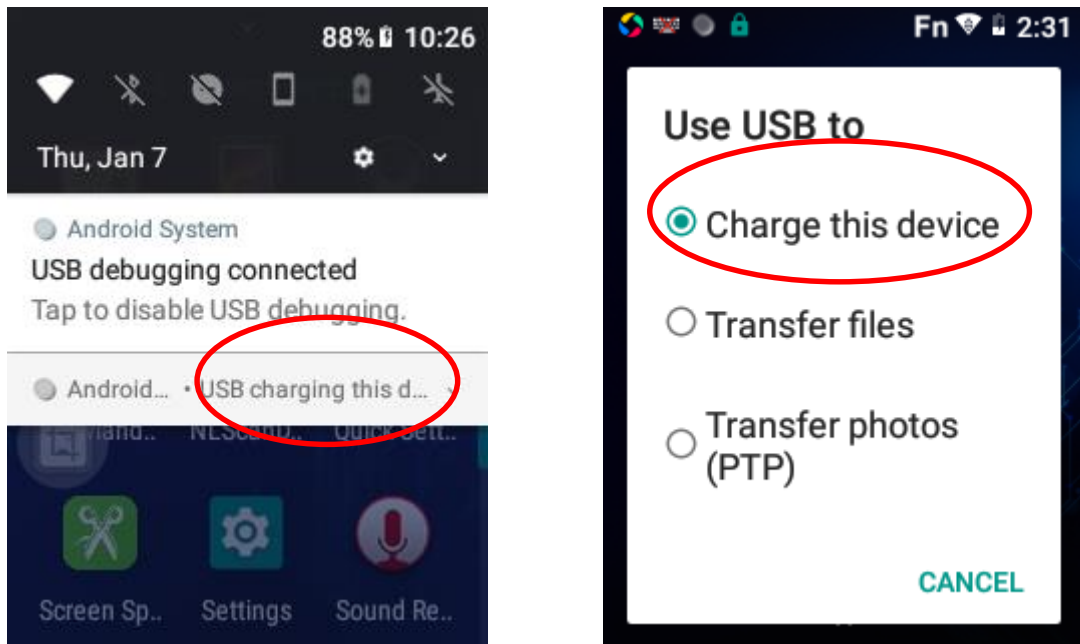

****Wi-Fi HID Output ****


No matter whether the PC is connected to the network by wire or wireless, it must ensure the PC and MT37H are in the same LAN network so that the Wi-Fi HID function can work.

1. Use the MT37H device to scan the below QR code, then the output mode of the MT37H will switch to “Output via API”.





2. Set the parameters of “Wireless Scan Configure Tool” on the PC as below. If the App is blocked by the firewall/anti-virus software, please add the App to the firewall/anti-virus exceptions.

- 1) Tap the “Wireless Scan Configure Tool” and set the IP, Wi-Fi SSID, Wi-Fi Password.



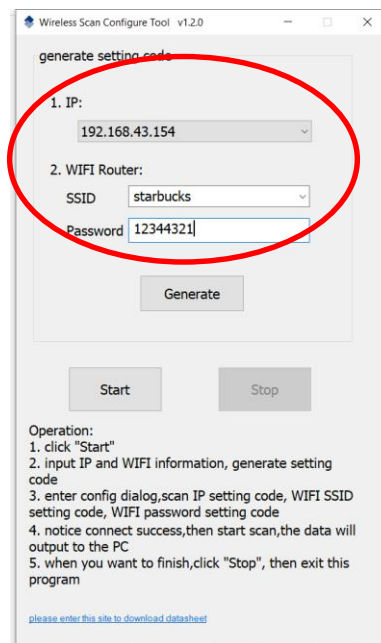


 -
- 2) Tap the "Generate" key on the tool, then it will pop up three setting codes (the "IP setting code", "Wi-Fi SSID setting code", and "Wi-Fi password setting code") on the PC screen.

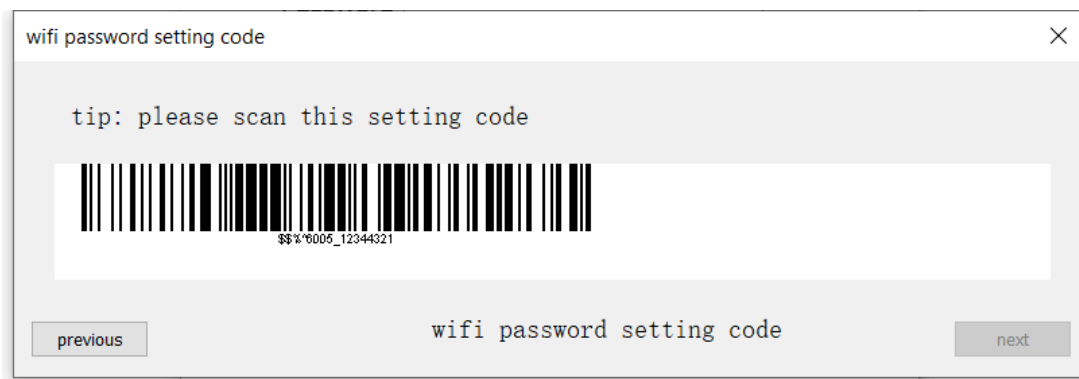



 3. On the MT37H, tap the quick setting icon Quick Sett... -> "HID Output" -> "Wi-Fi Output Setting" -> Set the IP, Wi-Fi SSID, Wi-Fi Password. You can use the MT37H to scan the above three setting codes generated on the PC to automatically fill in the parameters, or chose to manually input the parameters per your needs.

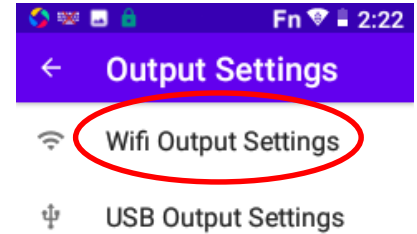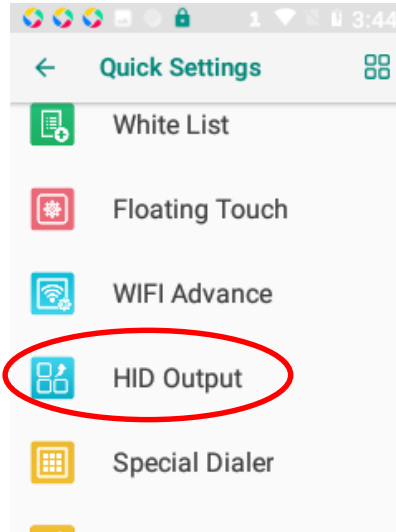

IP
192.168.74.11

Wifi SSID
ITU@2

Wifi password
12344321

Output enter-event


Scan barcodes or manually input the parameters.

4. After finishing the above settings, the MT37 will output the scanned data to the PC.

Shortcuts to Apps


Create a shortcut to an app on your Home screen: Tap  on the Home screen. Tap and hold your desired app and then drag it into the home screen.

Widgets

View all widgets: Tap and hold on a blank area of the Home screen and then tap .



Open a widget: Tap it.

Add a widget icon to the Home screen: Tap and hold the Home screen and then tap . Tap and hold your desired widget and then drag it into the Home screen.

Chapter 4 Scanning Barcodes

Introduction

This chapter includes scanning tips and instructions for setting up the scanner.

Scanning 1D Barcode

Adjust the scan angle or the distance between the MT37H and the target barcode to ensure the length of laser beam is roughly 8mm greater than that of the barcode, as shown below.



Correct	Wrong
	
	
	

Scanning 2D Barcode


Adjust the scan angle and the distance between the MT37H and the target barcode to make them fall into the following ranges:

1. Point the MT37H's focus lamp at the center of the barcode.
2. Move the MT37H until you find the appropriate scan distance.
3. Optimum scan angles:



Skew (α) < 45° (0° preferably)



Pitch (γ) < 45° (5° - 20° preferably)

Roll (β) = 0° - 360°

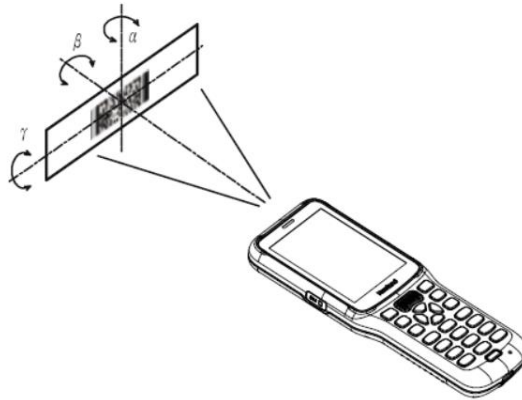


Programming Scanner

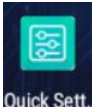Tap the quick setting app icon  on the home screen-> tap the scan app icon  to set the scanner parameters as per your actual needs.

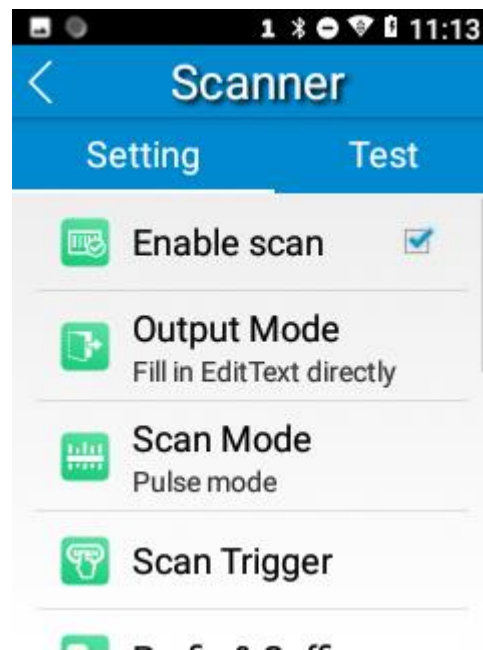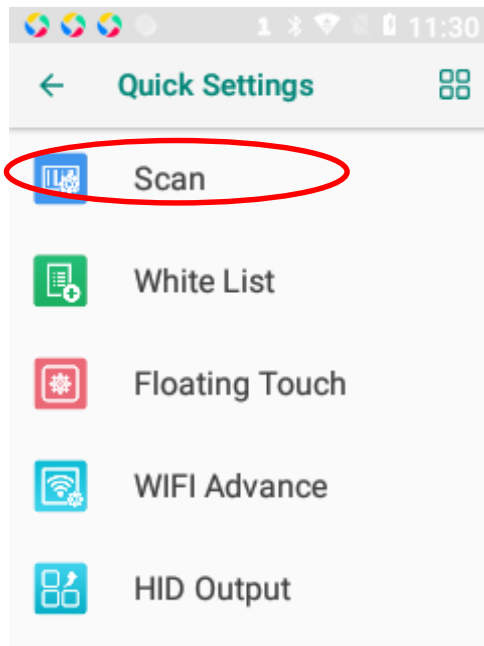

Enable Scan

Check or uncheck the “Enable scan” item to enable or disable the scanning feature of the MT37H.

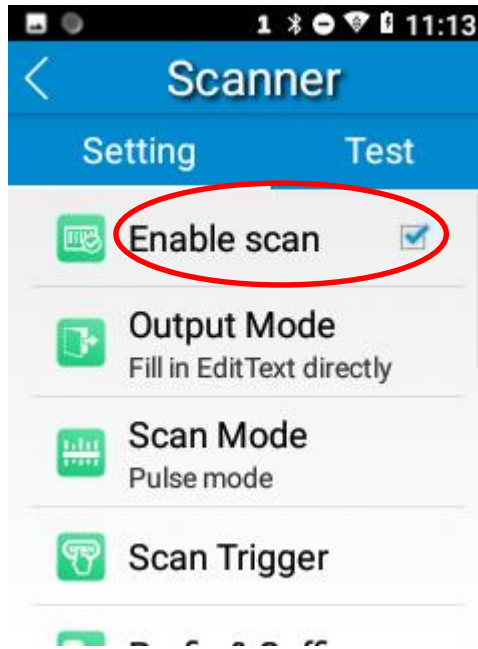

Output Mode

The MT37H provides three output modes: Simulate keystroke, Output via API, and Fill in EditText directly.

1. **Simulate keystroke:** Output scanned data to keyboard buffer to simulate keyboard input. Character interval (ms): A character interval of 0-100 milliseconds may be placed between the transmission of each character of scanned data.



2. **Output via API:** The application acquires scanned data by receiving system broadcasts.

3. **Fill in EditText directly:** Output scanned data at the current cursor position in EditText.

Overwrite output: Clear the text input box before sending the barcode currently scanned to make sure only the most recently scanned data is present in the text input box. This feature is available only when Simulate keystroke or Fill in EditText directly is selected.

Output enter-event: Send an Enter Key after each barcode is scanned.

Send virtual keyboard function: Make send virtual keyboard function as “action done”, “action search”, “action previous”, action search, etc.

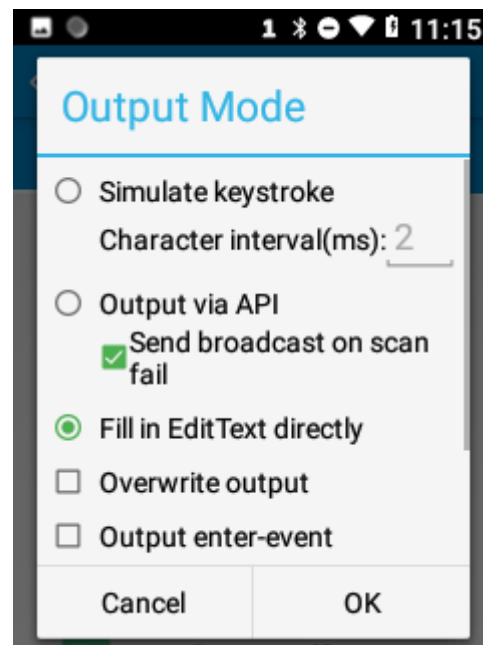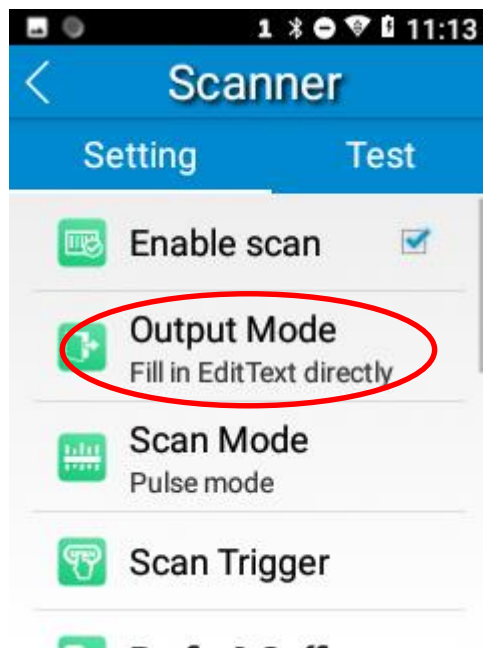

Scan Mode

The MT37H provides four scan modes: Level mode, Continuous mode, Pulse mode, and Delay mode.


1. **Level mode:** Press the scan trigger to start a decode session which continues until the trigger is released.
2. **Continuous mode:** Press the scan trigger to continuously read barcodes. To suspend or resume scan operation, simply press the scan trigger.

Scan interval (ms): This parameter sets the timeout between decode sessions.

3. **Pulse mode:** Press the scan trigger to start a decode session which continues until the decode session timeout expires.
4. **Delay mode (Scan on release key):** Press and hold the scan trigger to aim at barcode then release it to start a decode session which continues until the decode session timeout expires or a barcode is decoded. It is advised to use this scan mode and the Central Area Decoding feature to ensure that only the desired barcodes are read if multiple barcodes are placed closely together.

Decode session timeout (ms): This parameter sets the maximum time decode session continues during a scan attempt. To set it, enter a desired value and then tap "OK".


Masked repeat interval (ms): This parameter sets the time period before the scanner can read the same barcode a second time.

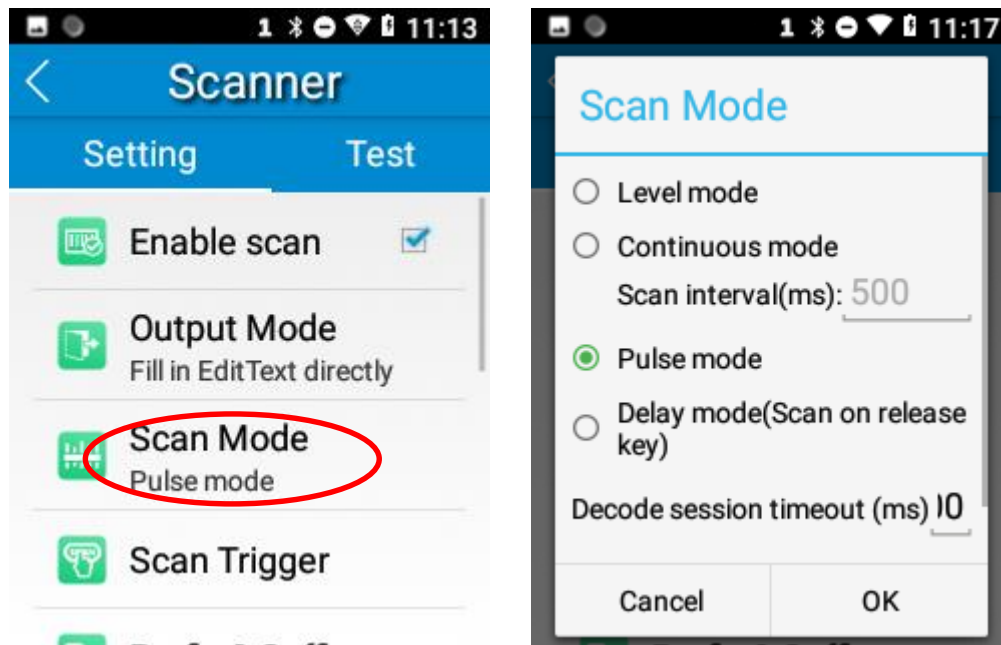

Scan Trigger


The scan key on the terminal can all serve as scan trigger. Enable or disable it as per your actual needs.

SCAN key: Use the Scan key on the front panel of the terminal as scan trigger.

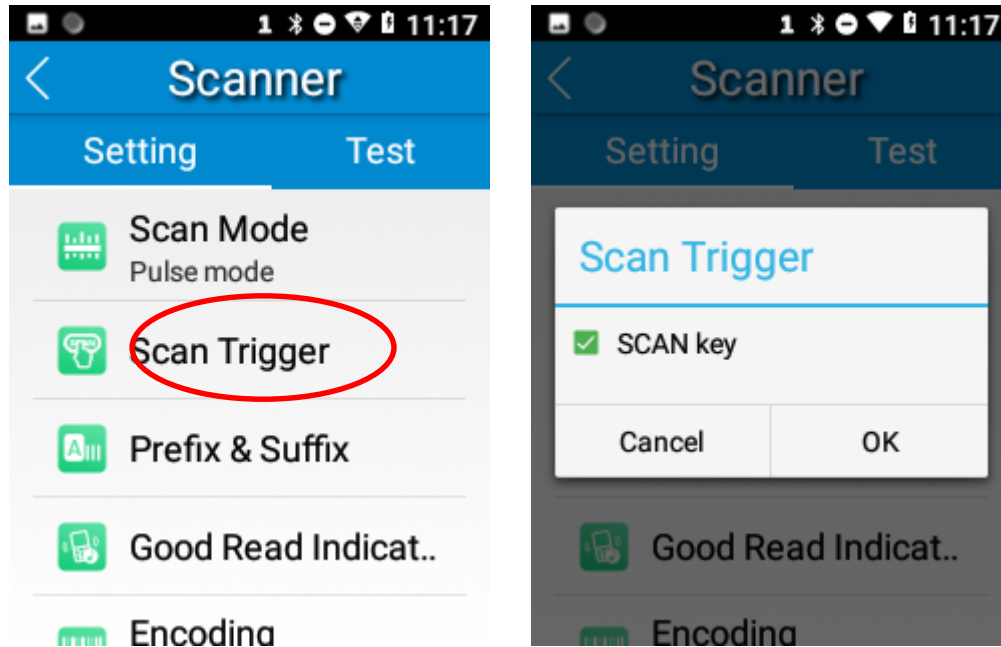

Prefix & Suffix


To set the prefix/suffix, enter the hexadecimal value of a desired prefix/suffix and then tap “OK”. For example, if you want to add a Line Feed character after each barcode, set the suffix to “0A”; if you want to add a Carriage Return character after each barcode, set the suffix to “0D”.

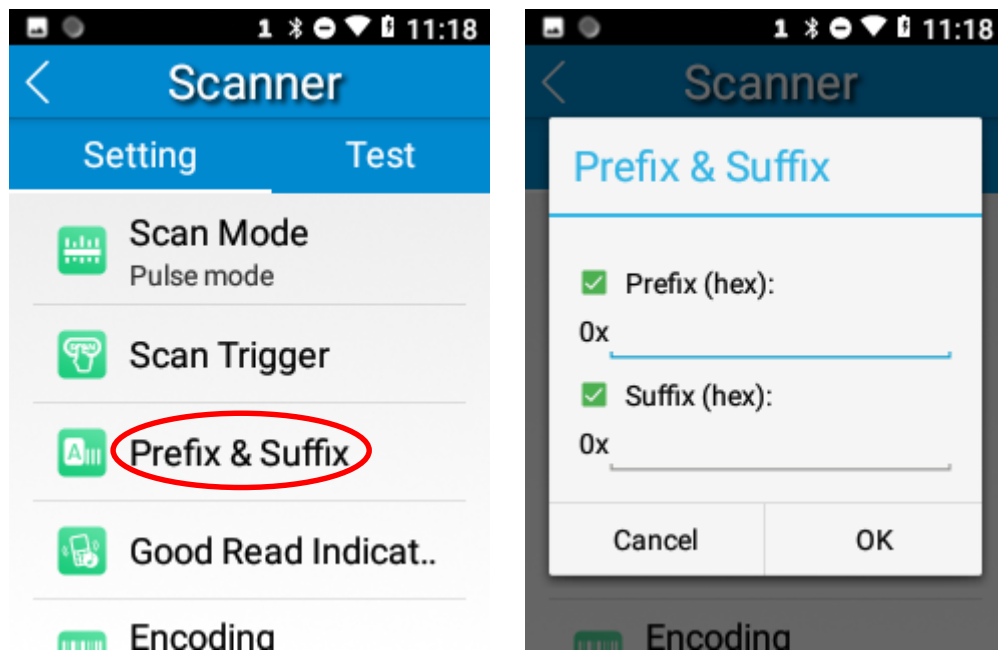

Good Read Indicator

The terminal can use sound/vibration/LED to indicate a good read. Choose one or more options as per your actual needs



1. **Sound:** The MT37H issues a short beep to indicate a good read.
2. **Vibrating:** The MT37H vibrates to indicate a good read.
3. **LED:** The blue LED on the MT37H flashes once to indicate a good read.

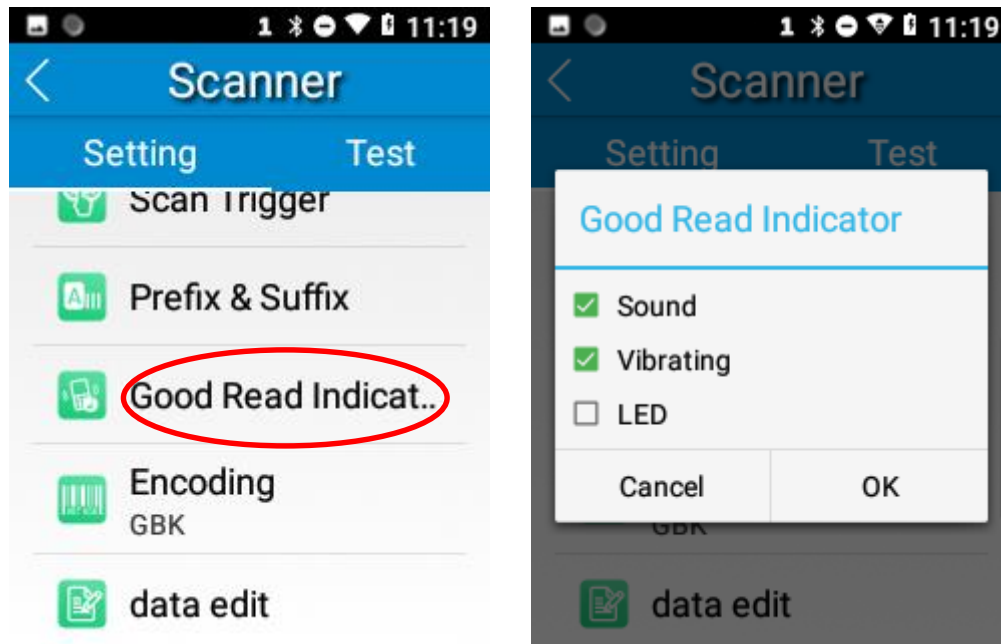

Encoding


Choose a character encoding to interpret barcode data.

1. **AUTO**: The terminal determines automatically if the target barcode uses UTF-8, GBK, ISO-8859-1, and windows-1251 encoding. If the terminal produces the wrong output, you may need to choose or enter a specific character encoding.
2. **UTF-8**: Dominant Unicode encoding.
3. **GBK**: A character encoding for Chinese characters.
4. **ISO-8859-1**: A common character encoding that covers Western European languages.
5. **windows-1251**: A character encoding designed to cover language that uses the Cyrillic alphabet such as Russian, Bulgarian, Serbian Cyrillic, and other languages.
6. **Other**: Enter a different character encoding when UTF-8, GBK, ISO-8859-1, and windows-1251 are not applicable. If the terminal does not support the encoding entered, this setting will fail.

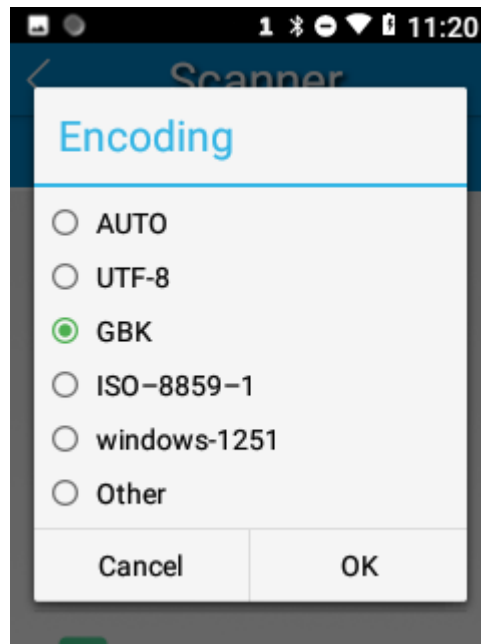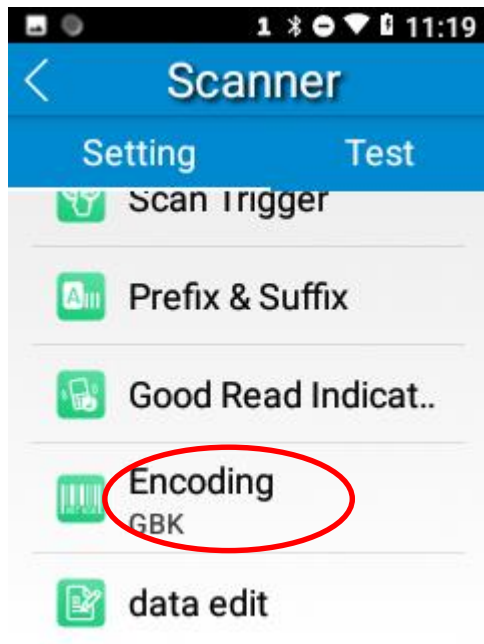


Data Edit

This feature allows you to edit barcode data with a script. Tap “load script” and then select the desired script file on the terminal, or scan the 2D barcode that contains a script, to load the script. Then select “exec script” and tap “OK”.

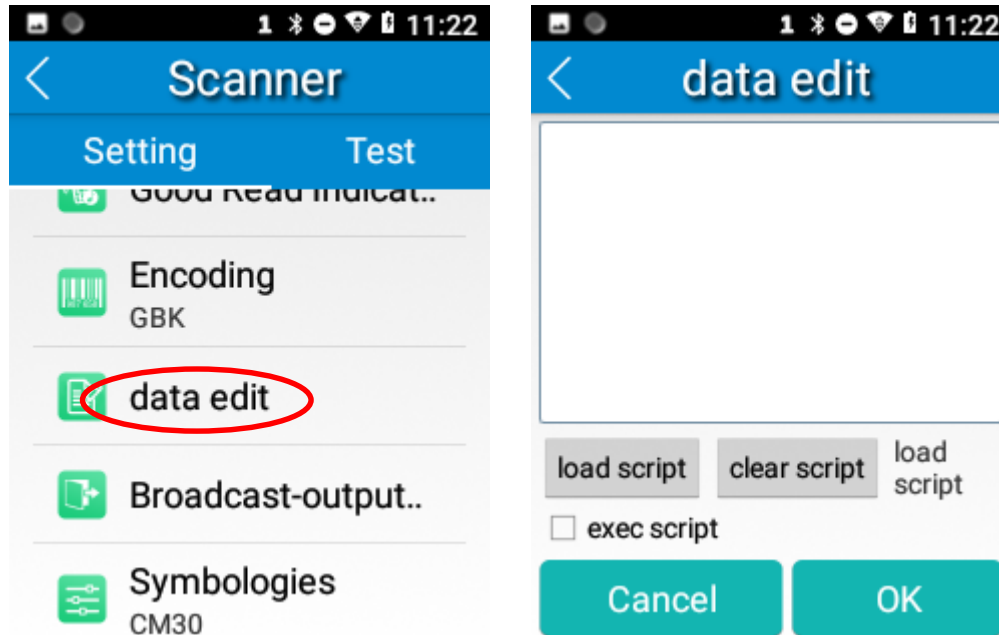

Broadcast-output Settings

When using broadcast as the scan output method, the MT37H will output the scan information with the specified broadcast ACTION and EXTRA.

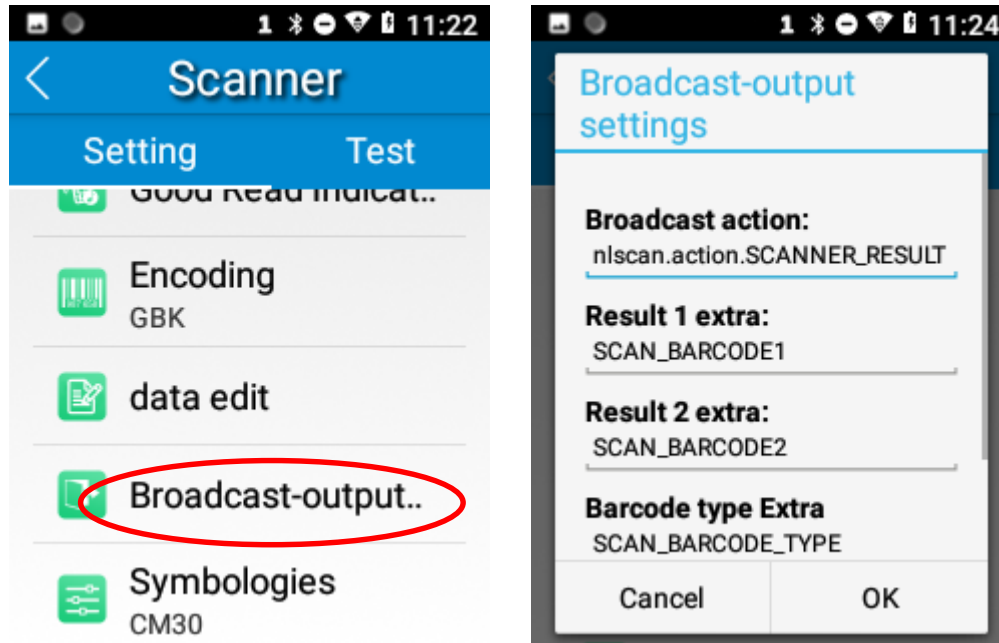


Symbologies

Note that supported symbologies depend on the scan engine integrated in the terminal. Here we will take CM30 for example.


1D code: Enable or disable 1D symbologies and set other barcode parameters.

Below are remarks for ITF codes:

- 1) The higher the security level, the lower the error rate of ITF code.
- 2) The barcode reading performance at the higher security level is not as smooth as that at low security. Therefore, the default security level is 1. Increase the security level only when the error rate is high.

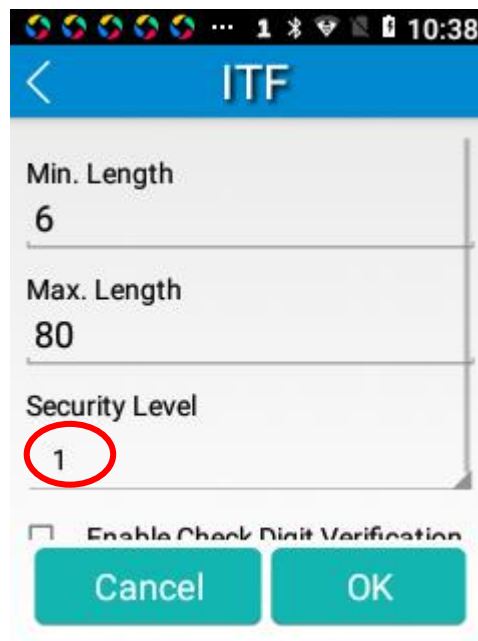


2D code: Enable or disable 2D symbologies and set other barcode parameters.

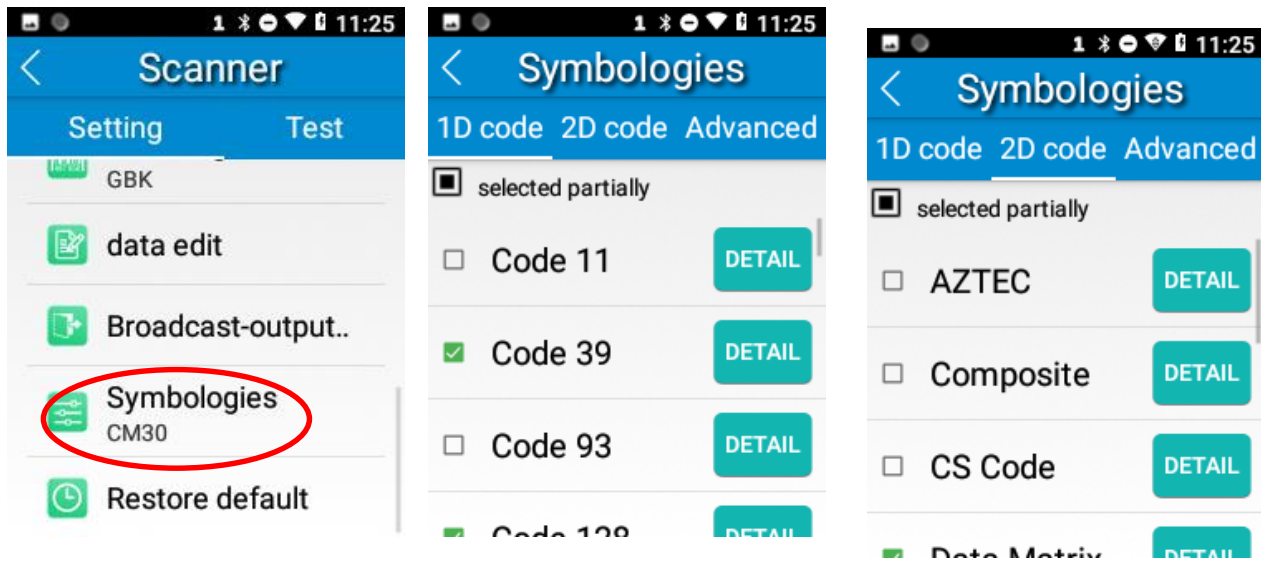


Advanced: The features listed here are designed to improve the scanning performance and energy efficiency of the terminal.

1. **Acuscan decoding:** When selected, the terminal only decodes the barcode aimed squarely by the aiming pattern. It is advised to select it to ensure that only the desired barcodes are read if multiple barcodes are placed closely together.

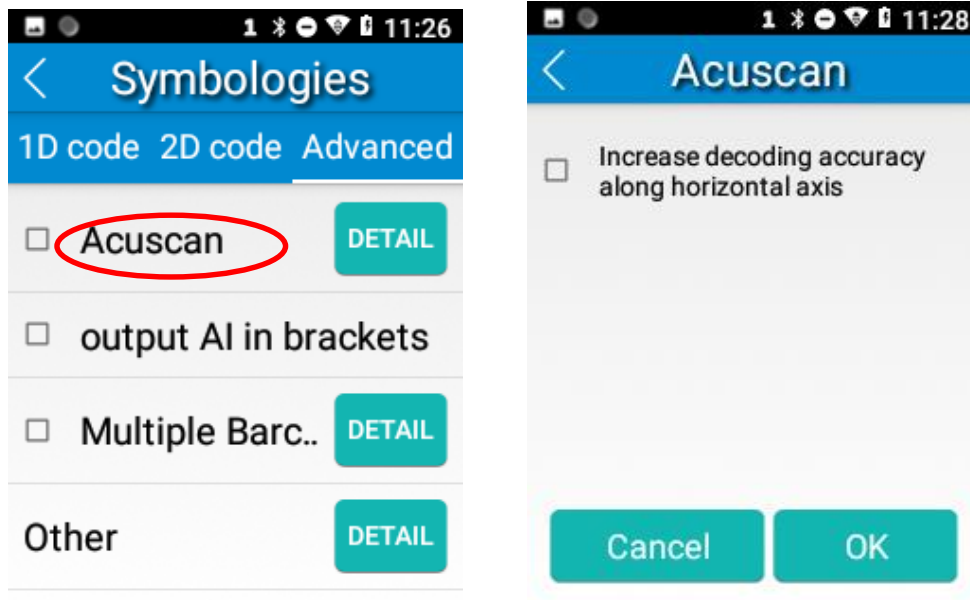


2. Enable output AI in brackets.

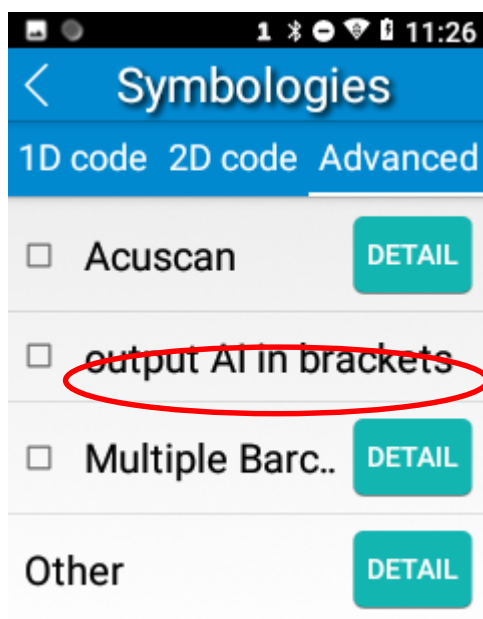

3. Multiple Barcode Scan

You can scan multiple barcodes at a time. You can set the maximum number of scans, then press and hold the scan button to scan once.

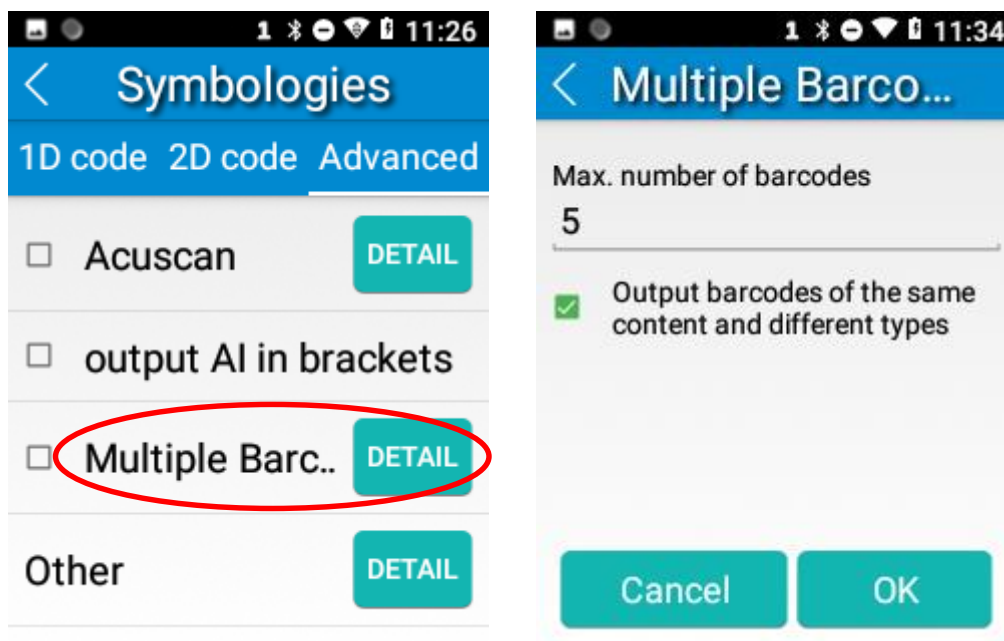

2. **Other:** Tap **DETAIL** to access the following parameter settings.


Noise reduction: This feature is designed to reduce noise in images produced by the terminal. However, the terminal shows a slight decrease in scanning speed when using this feature. It is recommended to enable it only when necessary.

Power plan: Two options are provided.

Power saving: The terminal's built-in scanner turns off automatically after 3 seconds of inactivity.

High-performance: The terminal's built-in scanner turns off automatically after 15 seconds of inactivity.

OCR Enable: Select this check box when reading passports (compliant with ICAODoc9303 standards, TD1/TD2/TD3 supported).

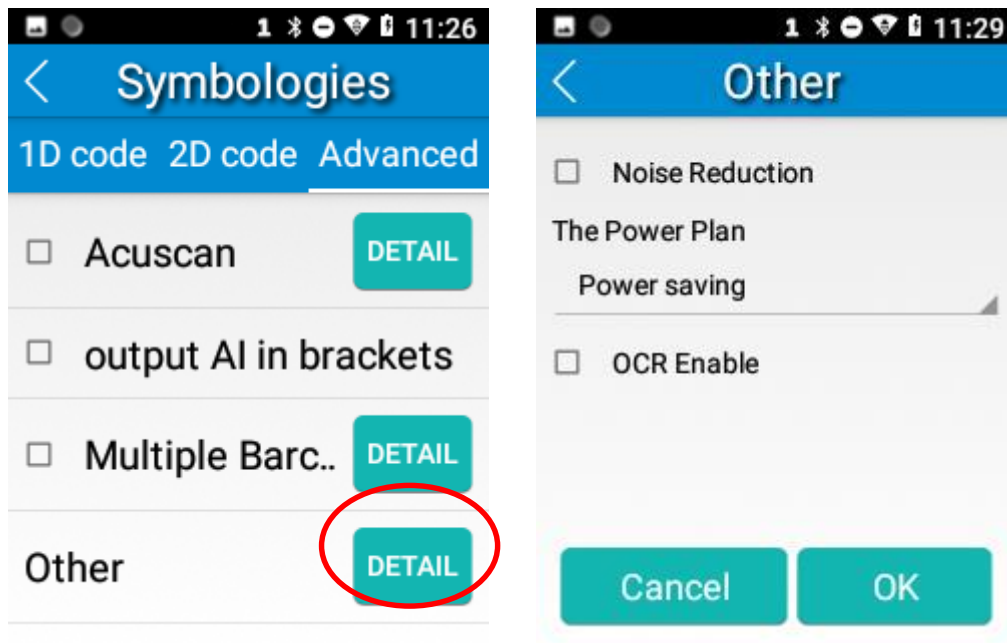


Temperature Measurement

Temperature measurement method:

- 1) Point the MT37H's temperature probe toward the target forehead.
- 2) Press the temperature measurement key when the test distance is within 6cm.

* This terminal is not for medical use.

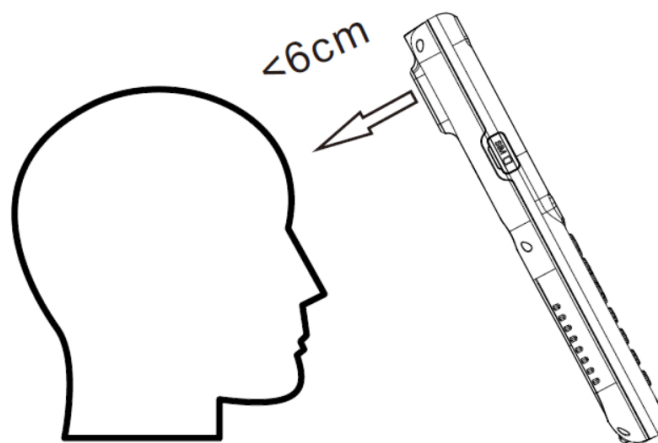


Temperature Scan Demo

1. Tap Newland Scan Demo App on the Home screen.



2. Tap "Temperature Demo" to enter temperature measurement mode.

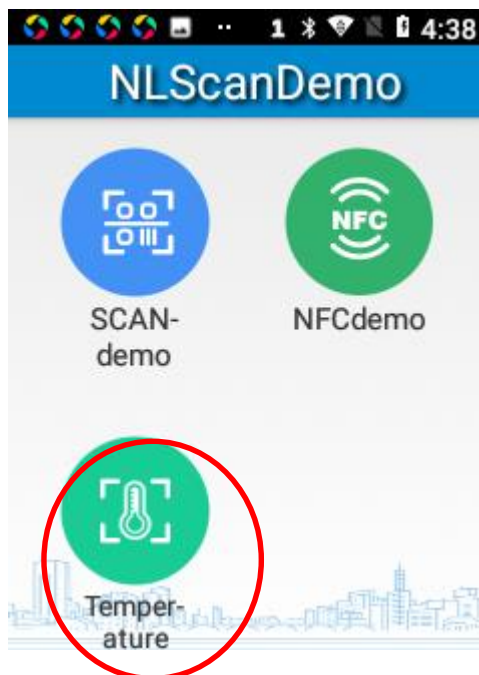

3. Adjust the scan angle or the distance between the MT37H and the target object to ensure the scan distance is within 6mm as mentioned previously.

4. Tap “Get Temperature” on the screen or enter key  on the keyboard to start the temperature measurement.



*Enable Flashlight: The terminal can use flashlight to indicate a good read.

 
Chapter 5 Bluetooth

This chapter describes how to connect the MT37H to other Bluetooth devices.

You can set up a Bluetooth connection between the MT37H and other Bluetooth devices, such as PC, mobile phones. Note that Bluetooth connection works better if there are no obstacles between them.


Before you can use a Bluetooth device with the MT37H, you must first pair them.

1. Make the Bluetooth device visible to the MT37H.


2. Tap the app icon  -> "Connected devices" -> "Bluetooth", and turn Bluetooth on to search for available Bluetooth devices.

3. Select the device from the search results to pair.

4. If prompted, input the pairing code and then tap "OK"; or if the pairing code is given automatically, then tap "PAIR".

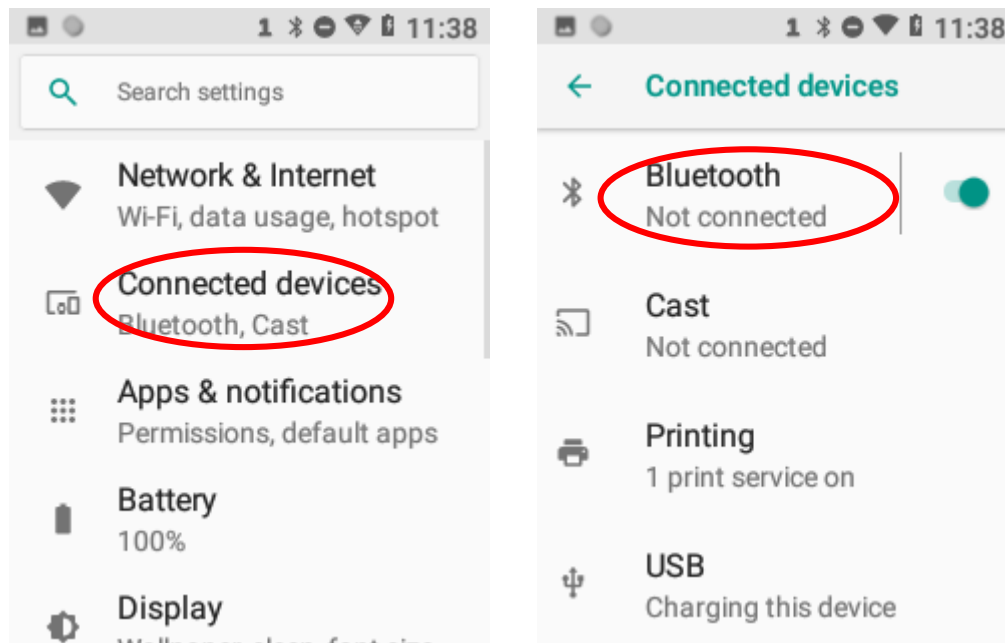

Unpair/rename a paired Bluetooth device: Tap the app icon  then "Connected devices" -> "Bluetooth", and turn

Bluetooth on. To rename the paired Bluetooth device, tap  and edit its name manually and then tap "OK". To unpair it, tap "FORGET".

Chapter 6 Wi-Fi

 
Introduction


This chapter describes how to connect the MT37H to a Wi-Fi network.


Wi-Fi Settings

Join a Wi-Fi network:




1. Tap the app icon  -> "Network & Internet"-> "Wi-Fi", and turn Wi-Fi on to find available Wi-Fi networks. If Wi-Fi is already ON, then the terminal will automatically scan for available networks.
2. Tap a network and then enter the password.
3. Tap "CONNECT".

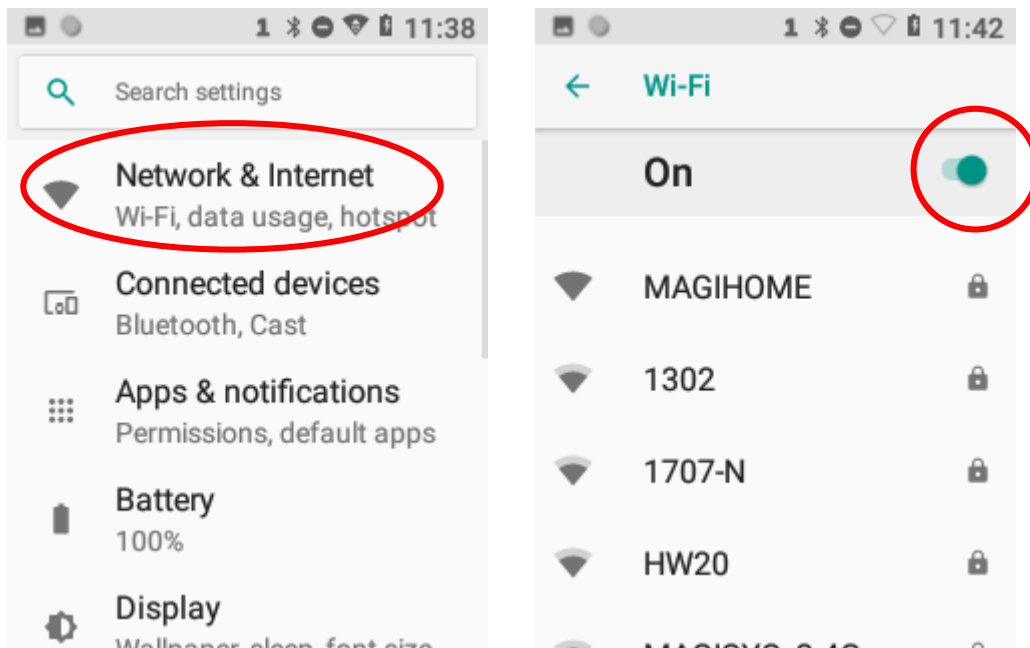

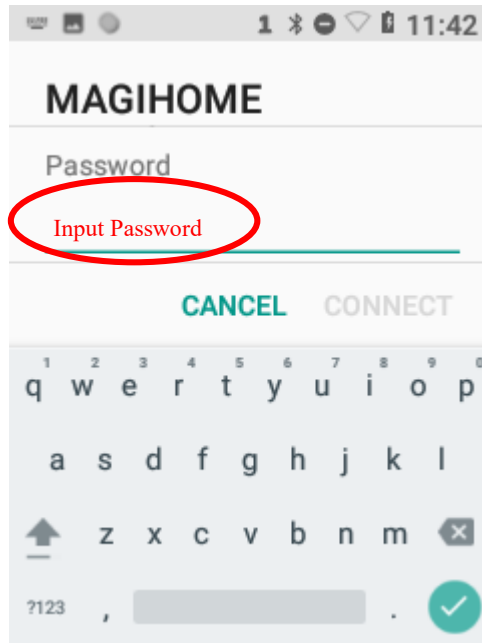

IP Settings

To set the IP, follow the first two steps of joining a Wi-Fi network, check the “Advanced options” item, tap “DHCP” and choose your desired option.

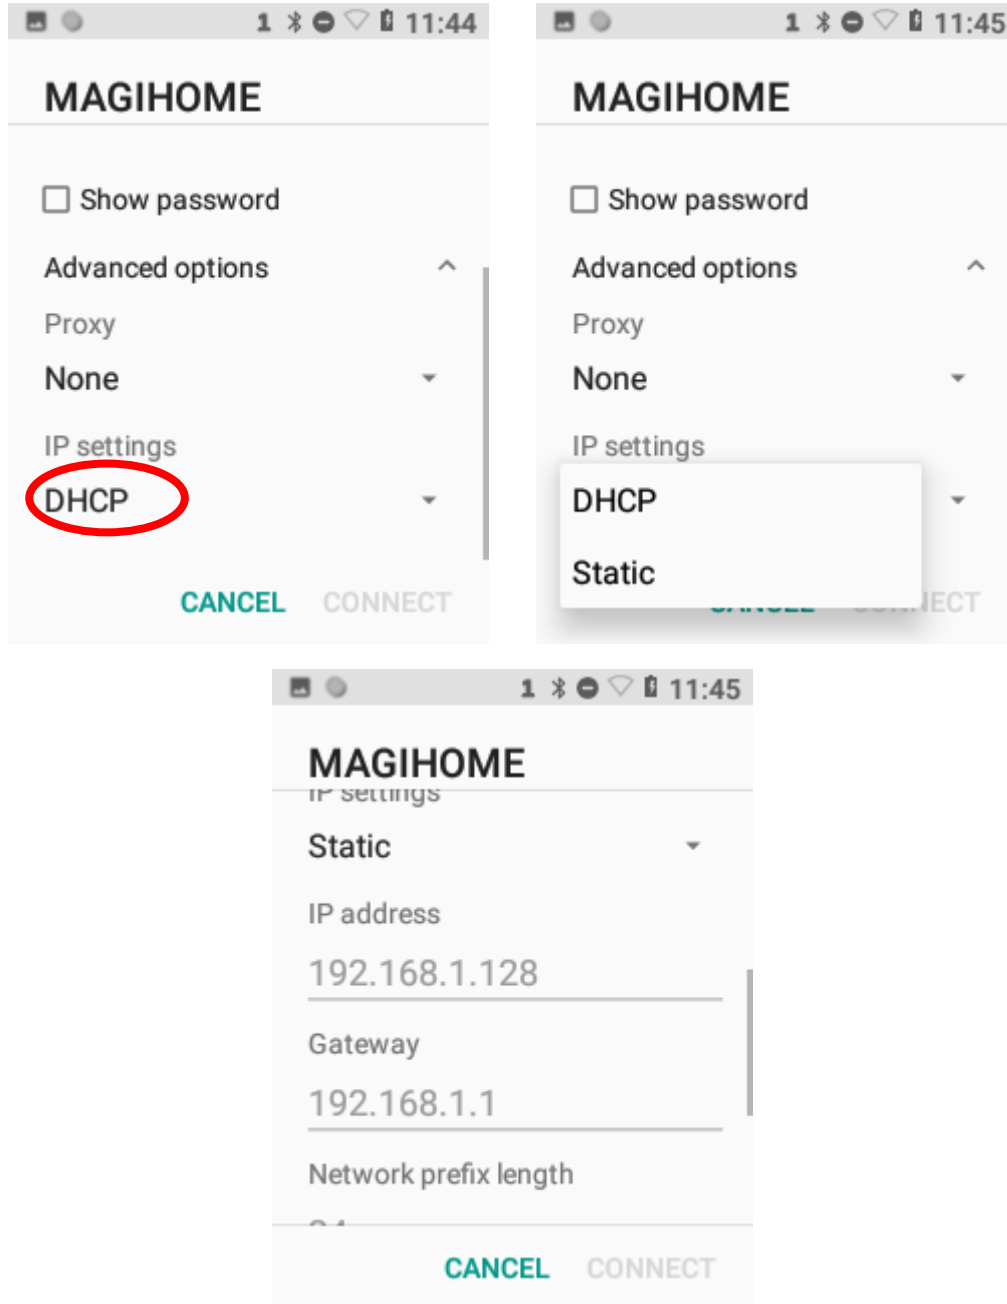


Chapter 7 Mobile Network


Introduction

The MT37H can also use 4G network to connect to the internet. To establish 4G connection, you must have a Micro SIM card installed in your MT37H.

Mobile Network Settings

 If no Wi-Fi networks are available, or if you've turned Wi-Fi off, then the MT37H connects to the Internet via your cellular data network when available.


Turn on cellular network: Tap  and then turn Cellular data on.

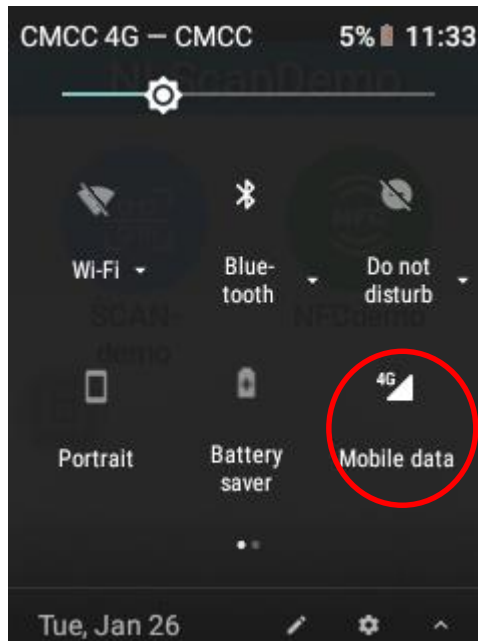


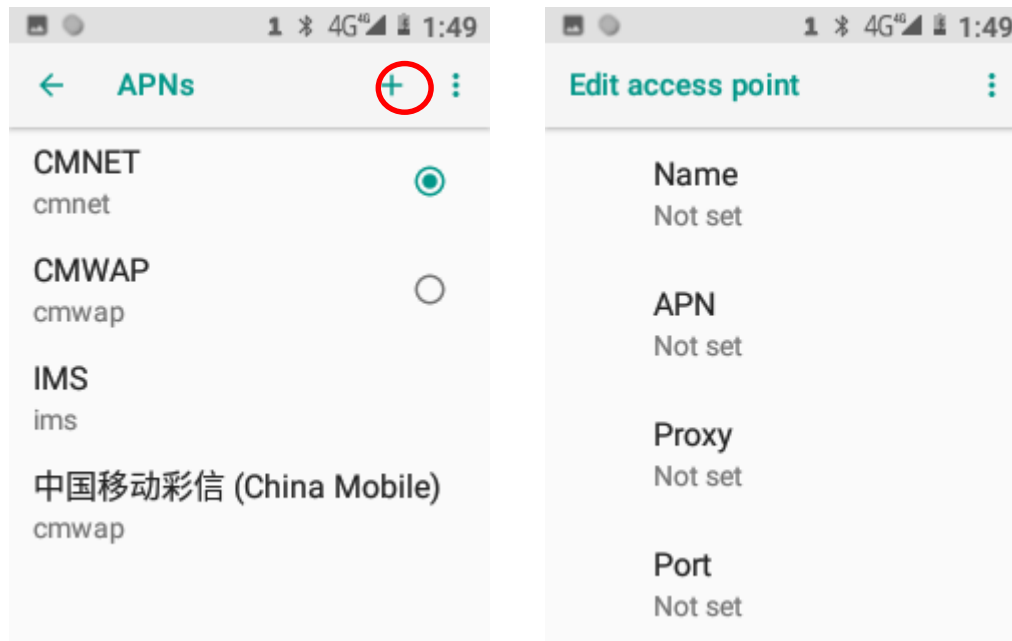
APN Settings

If you cannot connect to the internet when using your terminal's cellular data, you may need to change your APN settings on the MT37H to fix it:

1. Go to Settings -> Network & Internet -> Mobile network -> Access Point Names.

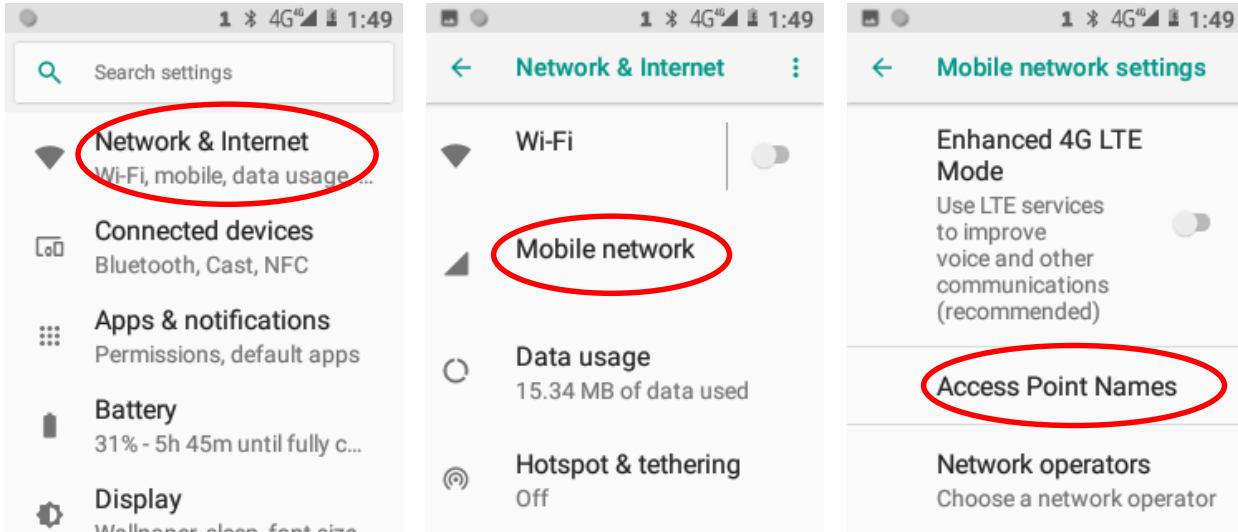

2. Tap  in the top right corner of the screen or tap the carrier of your SIM card on the screen. Then manually enter the APN settings. You can contact your carrier or visit their website to get the correct APN settings, or check the APN settings on a mobile device that can access the internet using the SIM card.




 
3. Press the Return key on the MT37H to go back to the previous screen and then select the APN you just added.



Chapter 8 Admin Tool

Introduction

The Admin Tool app is used to specify the apps that users can run on the MT37H.


Admin Mode Setting

Tap  on the Home screen then  to launch the admin tool and enter the Admin mode. Tap the “Return Key” on the keyboard then enter the password (default: 112233).

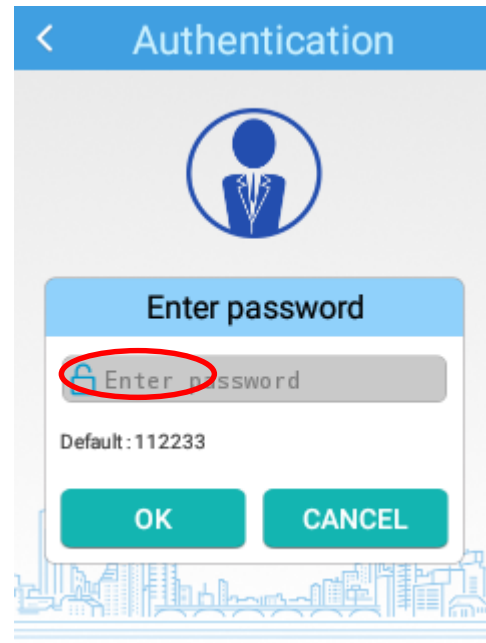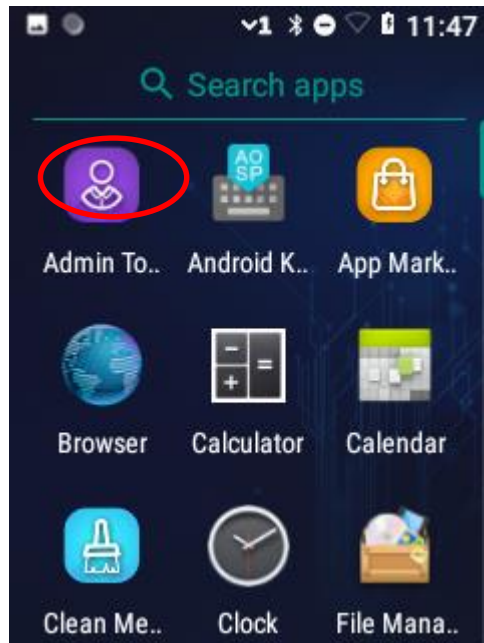


When in the Admin mode, you may set the following parameters as per your actual needs.


1. App manager: Tap "App Manager" -> "Select App", then select or deselect the apps available to normal users.

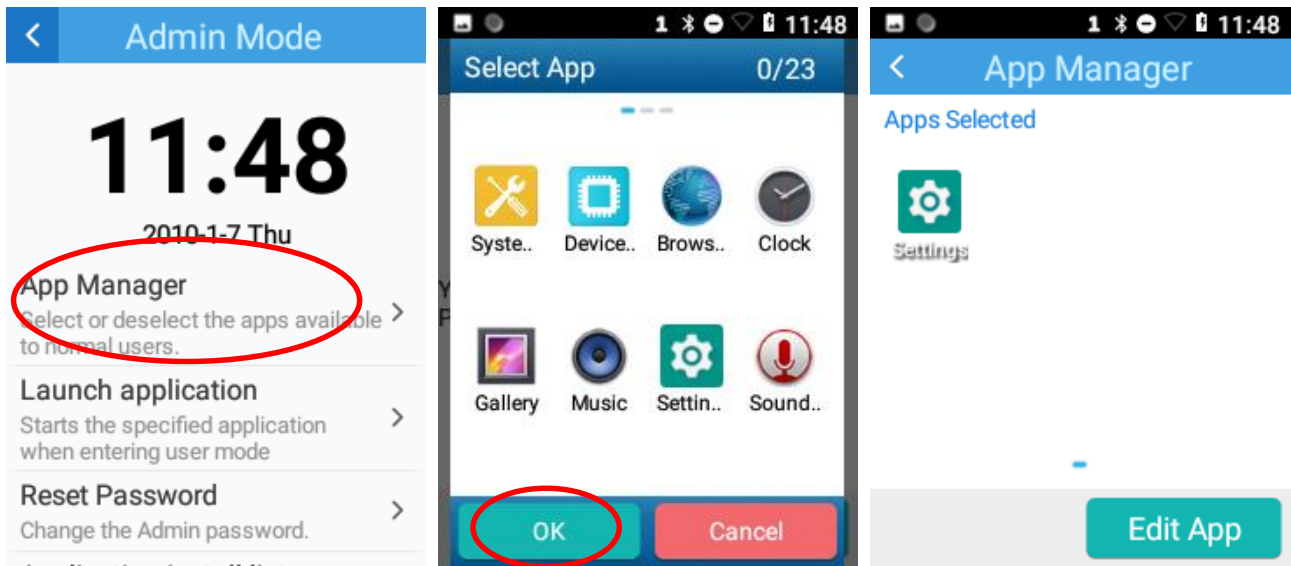


2. Launch application: Starts the specified application when entering user mode. Please note that only one app can be set.

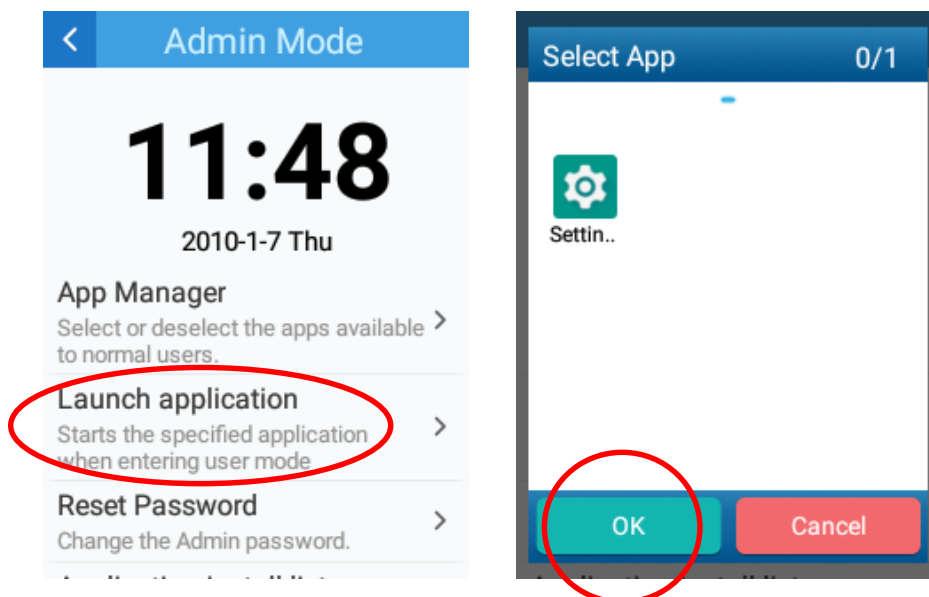


3. Reset password: Change the Admin password.

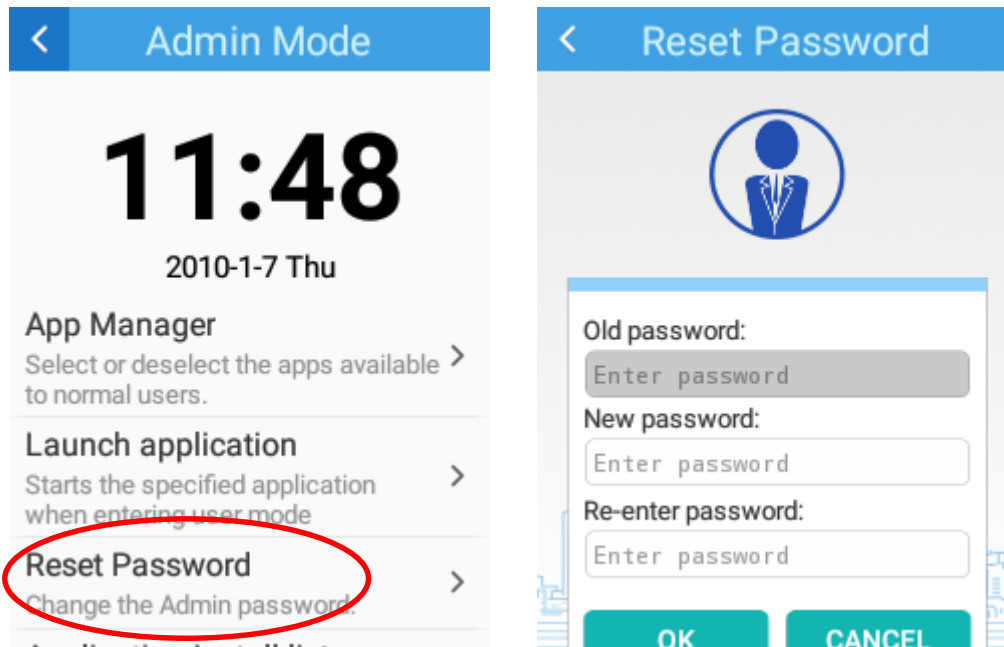


4. Application install listener: Add new application to list in user mode.

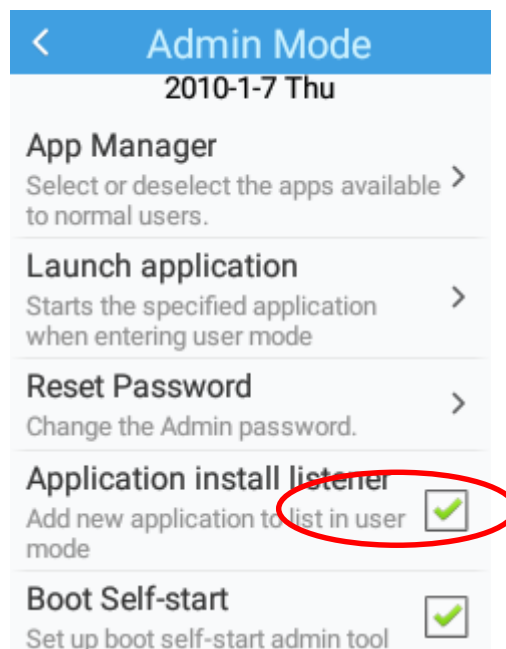

5. Boot self-start: Set up boot self-start admin tool.

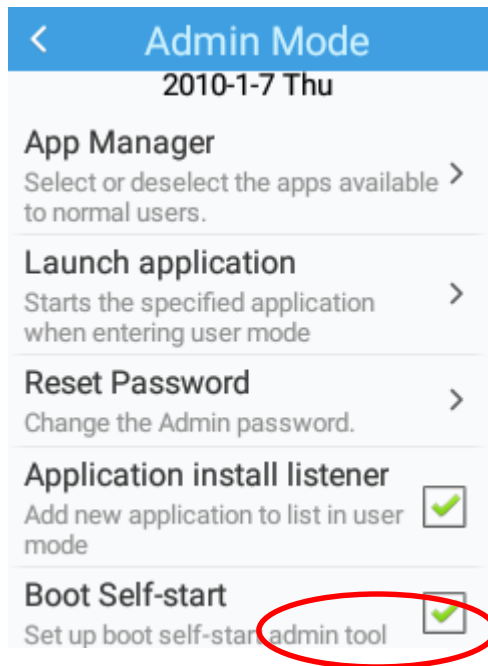

6. Exit: Exit admin tool.

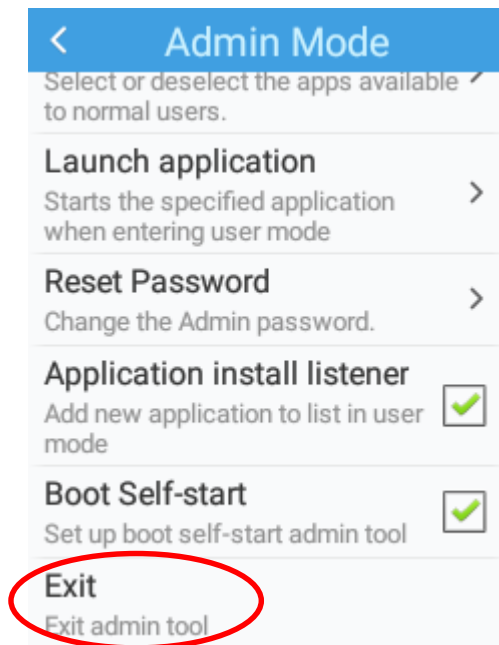




Chapter 9 Whitelist Manager

Introduction

The Whitelist Manager app is used to specify the apps that users can install on the MT37H.

Logging in to Whitelist Manager

Tap  "Quick Setting" on the Home screen then , enter the password (default: 112233), and tap "Login" to log in to the whitelist manager. Then set up your Whitelist as per actual needs.

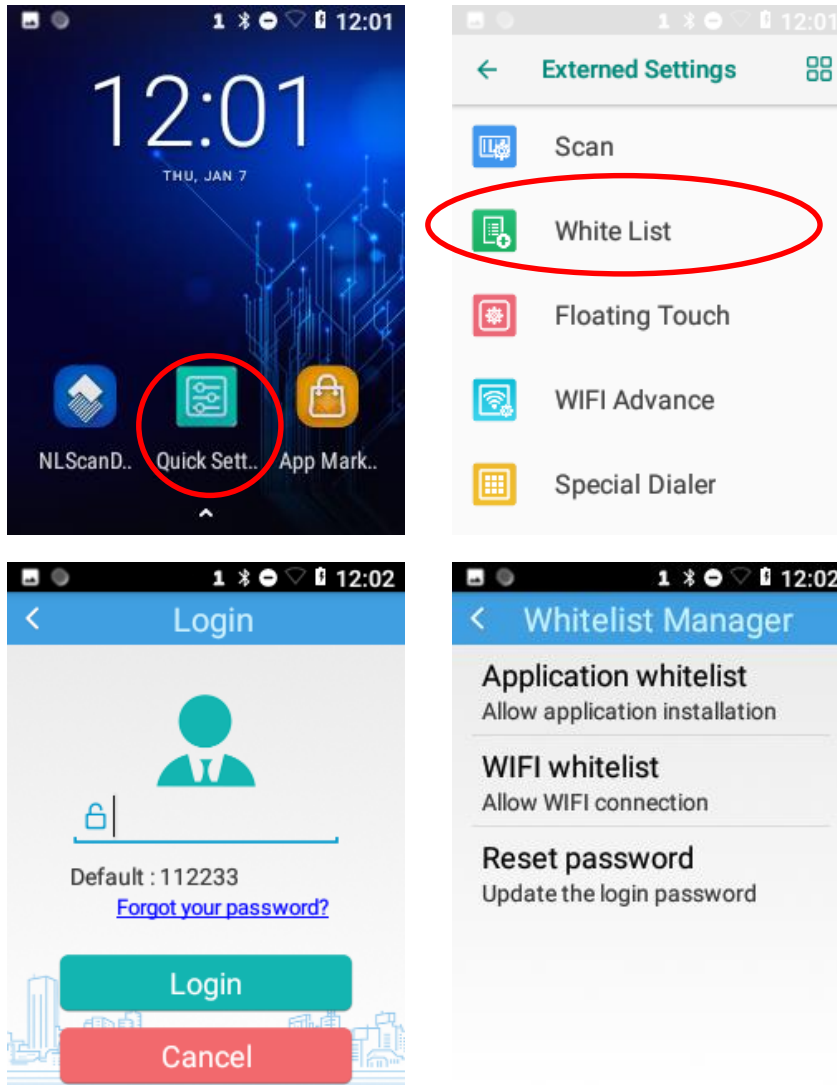




Chapter 10 Others

Camera

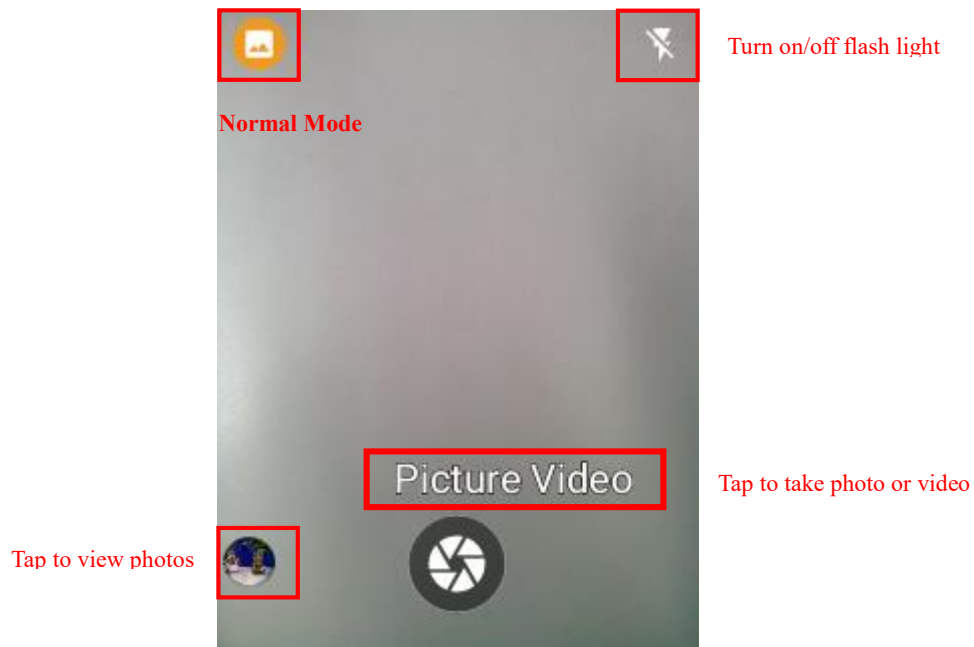

Tap the app icon **Camera** to launch the Camera app.

 


Tap normal modes icon  > Tap settings , then user can set parameters such as scene mode, self timer, picture size, ZSD, white balance, etc.




You can also download a camera app from the Internet or develop an app for the camera feature.

GPS




Tap the app icon  then “Security & Location”, and then:


1. Turn Location on.
2. Tap “Mode” and then choose a location mode as per actual need.
3. Use a third-party map app or other GPS apps to obtain location information.

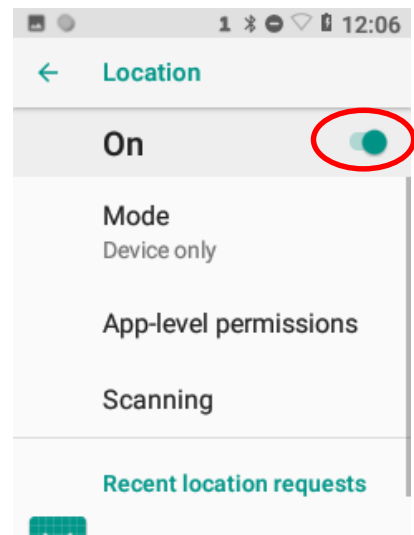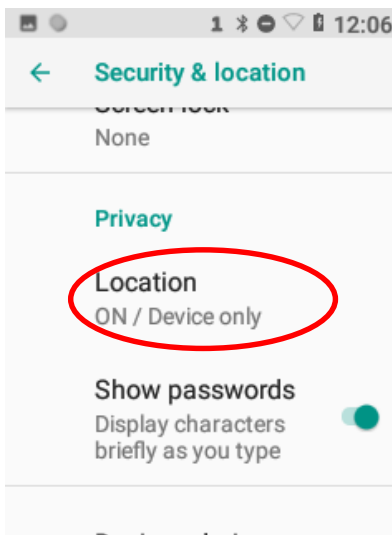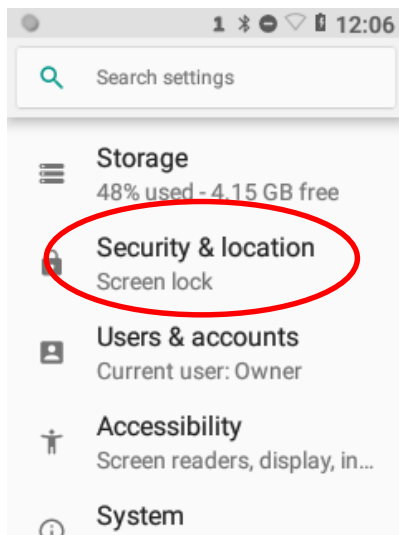

NFC (optional)

 


To enable the NFC feature, tap the app icon  -> “Connected devices” -> “NFC”, and then turn on NFC. Then you can install an NFC writer on the MT37H to read and write NFC tags.

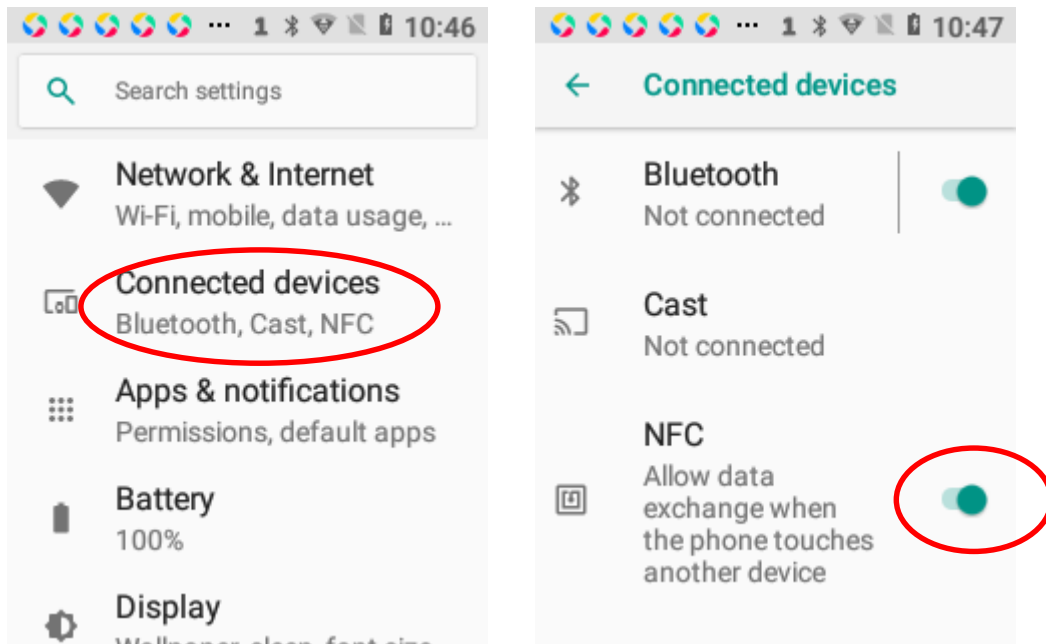

Memory Cleanup

Tap  to unfold the App list then tap  to clean up the memory.

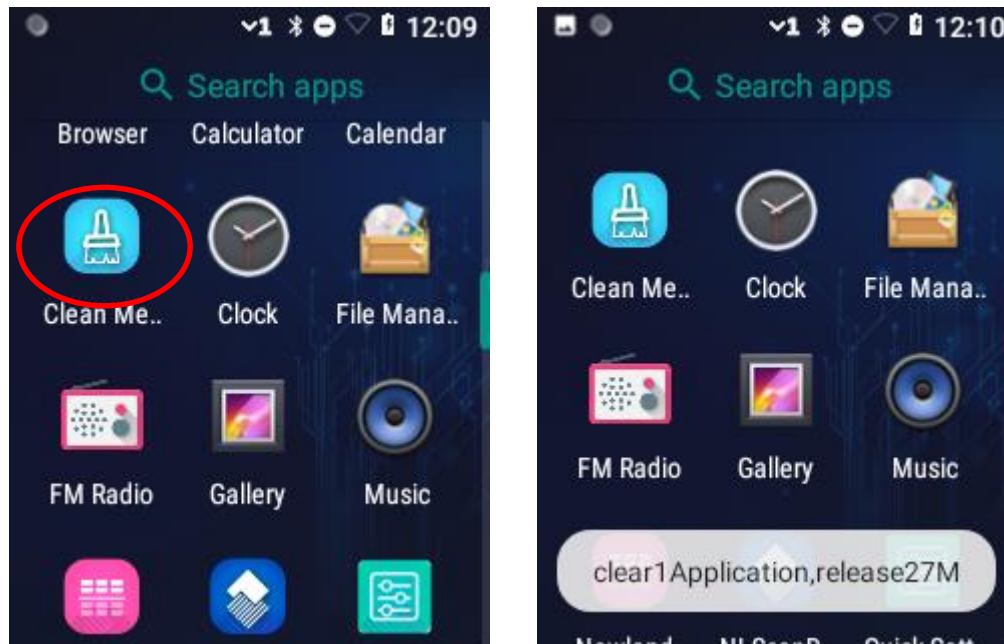


Note: When your terminal becomes less efficient after having run for extended periods of time, you may perform a memory cleanup or reboot the terminal to fix the problem.


Chapter 11 System Update

Introduction

This chapter introduces two methods to update the system software of the terminal: Online update and local update.

Online Update


Update the system online: Tap  on the Home screen -> "CHECK FOR UPDATES".

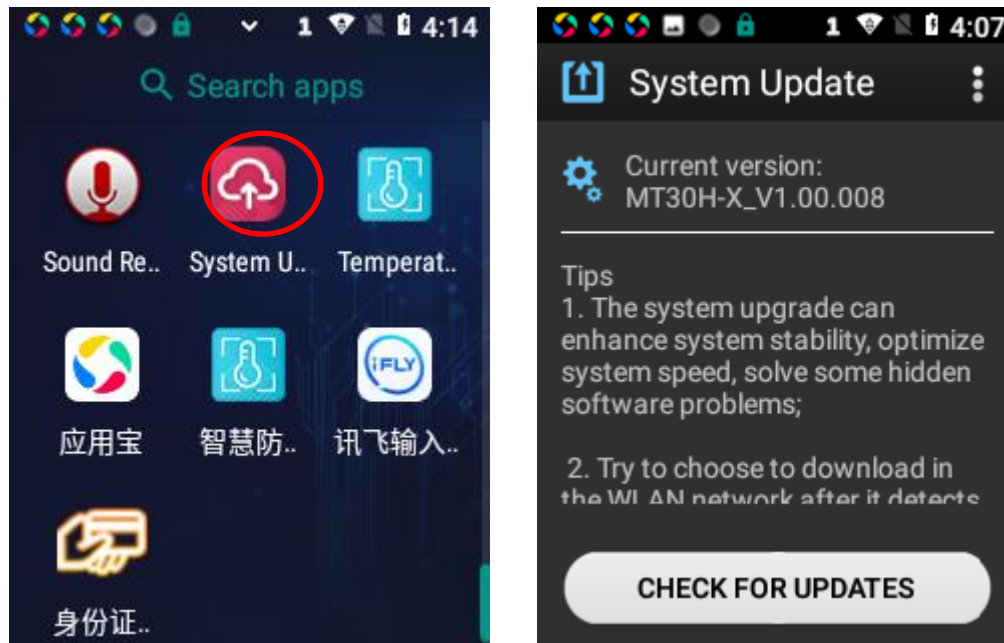


Locate Update

Zip File to the MT37H Drive

1. Connect the terminal to PC with the included USB cable. Swipe from top to bottom with one finger in one smooth motion to open the notification bar. Tap "USB charging this device". Then select "Transfer files".

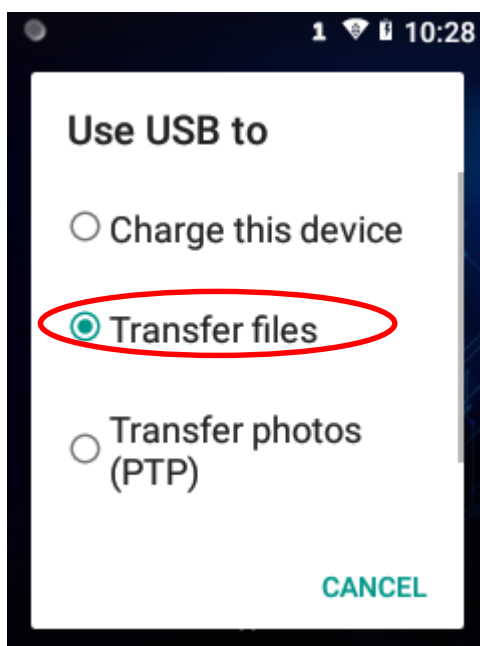



2. Copy the update zip file to the MT37H drive.

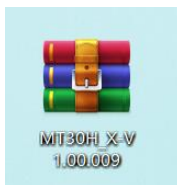


The file name might be different due to each version.



3. Tap  on the MT37H's Home screen then  to access the System Update screen.

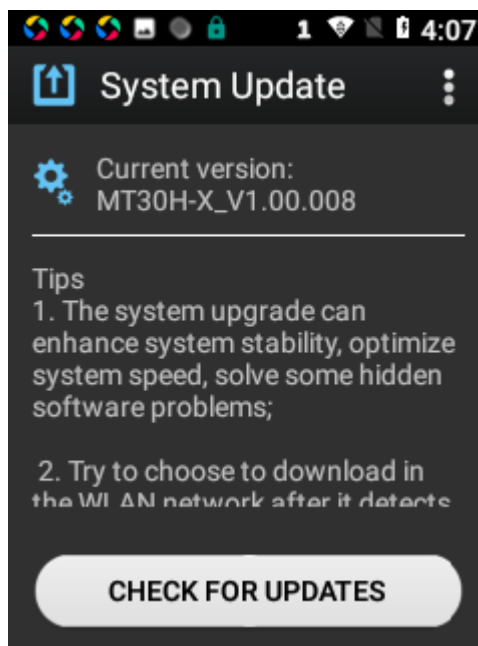

4. Tap  in the top right corner of the System Update screen, and then select "Local Update".

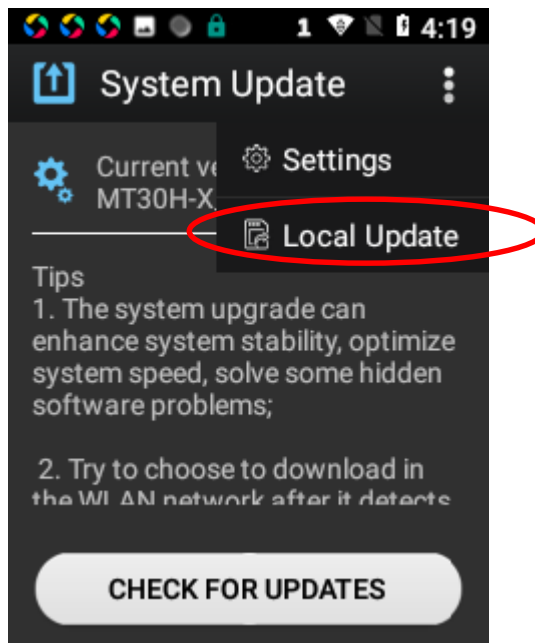

5. Select the update zip file. Then select "NEXTREBOOT" or "UPDATE".

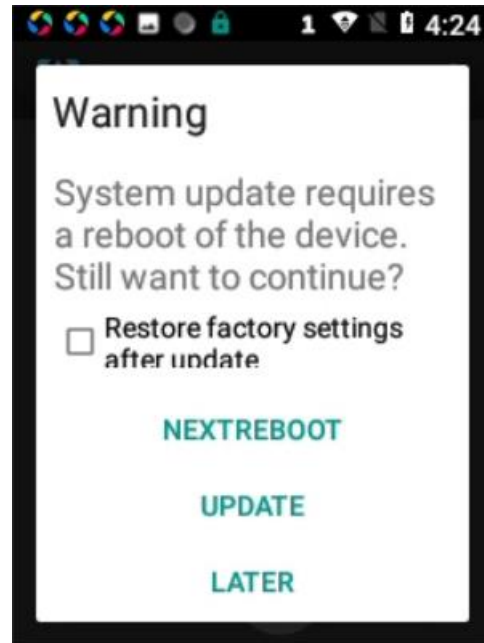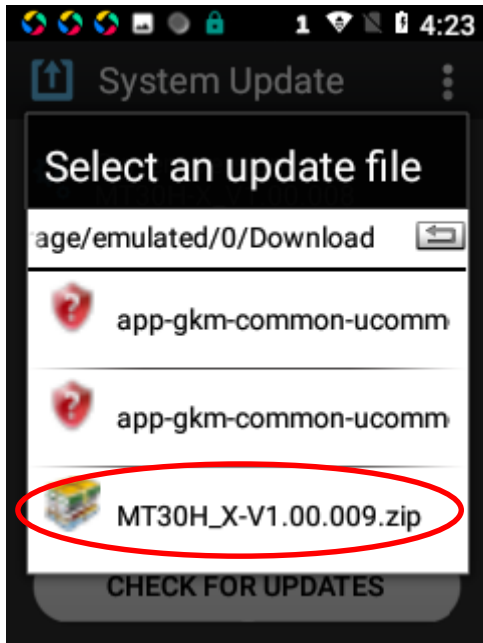

Chapter 12 App Development Guide

Development Environment

The MT37H runs on the Android 8.1 operating system, so you should use Android SDK 8.1 or lower when developing apps for the MT37H.

Use of Non-standard Interfaces

See **Newland Android PDA API Handbook**.

Chapter 13 Maintenance & Troubleshooting

Introduction

This chapter includes important safety and handling information and provides troubleshooting solutions for issues that might occur when using the terminal.

Important Safety & Handling Information

Disassembly and Retrofit

Do not disassemble or retrofit the terminal by yourself. Unauthorized disassembly or retrofit will void the warranty.

External Power Supply

Use only the AC adapter that meets the USB charging specification (recommend 5V,2A). Otherwise, there is a risk of damage to the terminal.

Abnormal Situation

Keep the terminal away from fire or heat sources. If there is unusual odor, overheating or smoke during charging, immediately cut off the power and disconnect the AC adapter, and contact your dealer or Newland customer service center. Continued use in this case may result in fire or electric shock.

Drop Damage

If the terminal is damaged due to a drop from high place, immediately power off and contact your dealer or Newland customer service center.

LCD Screen

Do not press against or strike the LCD screen. Otherwise, it may damage the screen. When handling a cracked or shattered screen, do not touch the liquid that has leaked from it to avoid skin burn or infection.

Stacking Heavy Objects

Do not place heavy objects on the terminal as those objects may fall and cause injury.

Mounting Location

Do not place the terminal on unstable or uneven surfaces as it may fall and cause injury. Do not expose the terminal to humidity or dust as this may cause fire or electric shock. Do not expose the terminal to direct sunlight for extended periods.

Wireless Functionalities

Do not use the terminal's wireless functionalities where wireless device use is prohibited or where it may cause interference or danger, such as in aircrafts, petrol stations.

Use & Maintenance

- ✧ If the terminal cannot be switched on after experiencing a sudden or unexpected power loss or other abnormalities, please long press the power key for 30 seconds to force reboot the terminal.
- ✧ Do not throw, drop or strike the terminal. Doing so may damage the LCD display, interrupt running programs, cause data loss in memory and result in malfunction.
- ✧ Clean the scan window regularly. Do not touch it with hands. Scratched or smudged window may degrade reading performance.
- ✧ Do not tap the touch screen with sharp objects. Doing so may damage the screen or cause internal short circuits.
- ✧ Use only a dry soft cloth to clean the terminal. Cleaning it with wet cloth or benzene/thinner/other volatile chemicals may deform and shorten the service life of the keypad and shell of the terminal.
- ✧ Do not place the terminal facedown on any surface, or there might be misoperations.
- ✧ Sudden temperature drops may cause condensation on the shell which could cause malfunction. Care should be taken to avoid condensation. If condensation occurs, dry the terminal before use.

Battery Safety Guidelines

- ✧ **Do not dispose of batteries in a fire as they may explode.**
- ✧ The battery can be charged and discharged over 300 times. If the battery life is unreasonably short, please contact your dealer or Newland customer service center to replace the battery with a new one.
- ✧ Use only 5V/2A AC adapter. Use only the battery and AC adapter provided by Newland.
- ✧ Do not continue to charge a battery that is fully charged. Overcharging will shorten battery lifespan.
- ✧ Charge the device before the battery is exhausted; Excessive battery discharge will have a bad impact on the device. In severe cases, it may cause the device to fail to boot normally.
- ✧ Avoid charging in a low or high-temperature environment. The most suitable temperature for charging is at 5°C–45°C (41°F–113°F), and it cannot be charged below 0°C (32°F).
- ✧ If the device is not used for a long time, it will discharge slowly. During the storage, it is recommended to shut down the device and regularly recharge it (at least every six months). Ideally, Battery should be stored between 30% to 50% state of charge.

-
- ✧ Do not use damaged or faulty AC adapters or batteries. If the battery is swelling, bulging, or having other abnormalities, please stop using it immediately.
 - ✧ **Properly dispose of and recycle batteries. Do not dispose of them as household garbage.**


Troubleshooting

Problem		Possible Cause & Solution
Type	Description	
Keypad	Unresponsive keypad or incorrect response to any key entry.	This problem may be caused by unreliable cable connection between keypad and mainboard or keypad malfunction. Please contact Newland after-sales service.
Battery	The charging LED is OFF when charging.	Ensure the AC adapter is plugged in properly.
	Stop charging or charging slowly in a low-temperature environment.	Charging protection is enabled when the temperature is lower than 0 degrees Celsius. To continue charging at normal speeds, please move to a warmer environment before charging your device.
	Noticeably short battery life.	<ol style="list-style-type: none"> 1. Check the battery level. If the battery is almost depleted, recharge it. 2. Restart the terminal, if the problem remains, please contact the after-sales service center.
	The fully charged battery is depleted after the terminal is switched on.	Restart the terminal, if the problem remains, please contact the after-sales service center.
USB	USB communication failure	<ol style="list-style-type: none"> 1. Ensure that the USB cable connections are secure. 2. Ensure that there is no contaminant inside the Micro USB port. 3. If the problem remains, please contact the after-sales service center.
LCD Screen	No display	<ol style="list-style-type: none"> 1. Ensure the terminal is switched on. 2. If the terminal is in sleep mode, press the Power key to wake it up. 3. Check the battery level. If the battery is depleted, recharge it. 4. If the problem remains, please contact the after-sales service center.
System	Cannot switch on	<ol style="list-style-type: none"> 1. Check the battery level. If the battery is depleted, recharge it. 2. Switch the terminal on after using the AC adapter to connect it to a power outlet. If the problem disappears, then continue to charge the terminal.

	System halted	<ol style="list-style-type: none">1. The problem may be caused by bugs of downloaded apps. Ensure that only reliable apps are used.2. The problem may be caused by a sudden or unexpected power loss. Long press the power key for 30 seconds, and then restart the terminal.3. If the problem remains, please contact the after-sales service center.
--	---------------	--

Newland AIDC

 No.1 Rujiang West Rd., Mawei, Fuzhou, Fujian 350015, China

 +86-591-83979500

 info@newlandaidc.com 

www.newlandaidc.com

Asia Pacific

Add: 6 Raffles Quay #14-06 Singapore 048582
Email: info@newlandaidc.com

Taiwan:

Add: 7F-6, No. 268, Liancheng Rd.,
Jhonghe Dist. 235, New Taipei City,
Taiwan
Tel: +886 2 7731 5388
Email: info@newlandaidc.com

Japan:

住所: 〒108-0075
東京都港区港南1丁目9-3 6
アレア品川ビル13階407
電話: +84 03 4405 3222
メール: info@newlandaidc.com

Korea:

Add: Biz. Center Best-one, Jang-eun Medical
Plaza 6F, Bojeong-dong 1261-4, Kihung-gu,
Yongin-City, Kyunggi-do, South Korea
Tel: +82 10 8990 4838
Email: info@newlandaidc.com

Indonesia:

Add: Eightyeight@kasablanka Tower A 12th
Floor Unit A&H, Jl. Casablanca Raya Kav. 88,
Jakarta Selatan 12870
Tel: +62 8161157247
Email: info@newlandaidc.com

Vietnam:

Tel: +84 909 345 375
Email: info@newlandaidc.com

India:

Add: 416 & 417, Tower C, NOIDA ONE
business park, B-8, Sector 62, Noida,
Uttar Pradesh - 201301
Tel: +91 120 3508102
Email: info@newlandaidc.com

Europe & Middle East & Africa

Add: Rolweg 25, 4104 AV Culemborg, The Netherlands
Tel: +31 (0) 345 87 00 33 Web: www.newland-id.com
Email: sales@newland-id.com Tech Support: tech-support@newland-id.com

North America

Add: 46559 Fremont Blvd., Fremont, CA 94538, USA
Tel: +1 510 490 3888
Email: info@newlandaidc.com

North America Channel:
Tel: +1 408 838 3703
Email: info@newlandaidc.com

Latin America

Tel: +1 239 598 0068
Email: info@newlandaidc.com

Brazil:
Tel: +55 35 9767 6078

Chile:

Tel: +56 9 9337 3177

Colombia:

Tel: +57 319 387 4484

Mexico, Central America & Caribbean:

Tel: +52 155 5432 9079



Newland AIDC
Scanning Made Simple

